

MANUAL FOR MECHANICAL TABLE TOP SCALES “KC-02/-03/-04”

- Unpack the scales and remove all packaging, put on a stable surface that will be able to clear the current load by a considerable margin (the capacity of the scales + the unloaded weight of the scales).
- Remove the transport spring below the loading plate.
- Check that the loading plate’s fixing screws are securely tightened.
- Press on the loading plate a few times.
- If the weight indicator does not display “0”, adjust with the grooved resetting device (under the loading plate).

NB!

- The object to be weighed must not be so big that there is any risk of it falling from the weighing platform and causing injury to the user.
- The centre of gravity of the object to be weighed must always be within the dimension of the loading plate by a good margin.

PL.10/10/2001