



# Passande maskinsågblad till de vanligaste kallsågarna

S = Standardfäste

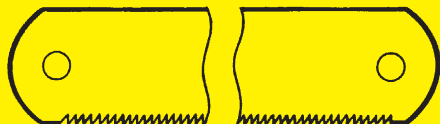

KA = Kastofäste

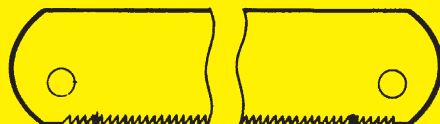

S = Standardfäste				KA = Kastofäste			
Bladdim.	Hål	Passar till kallsåg:		Bladdim.	Hål	Passar till kallsåg:	
mm	mm			mm	mm		
300×32×1,6	8,5	Kasto	UBS 160 WBS 150/170 WBS 172 BSM 115/175 RC 30	450×38×2	8,5	Kasto	BSM 240/270 BSM 260 A BSM 280 PSB 240 AU PSB 260 AU PSB 280 U UBS 240 A UBS 240 R UBS 280 VBS 282
350×32×2 (1,6)	8,5	Sajo	Super A 200 Super 212	500×40×2	10,5	Kasto	BSM 323 EBS 250
		Behringer	BSM 202 BSM 210 BSM 180 A BSM 200 RA BSM 170/220 PSB 210 U PSB 180 AU UBS 200/180 A VBS 192	500×50×2,5	10,5	Kasto	EBS 250 A EBS 250 U
350×38×2	8,5 – 10,5	Ejvo	210	550×50×2,5	10,5	Kasto	BSM 350 EBS 360 U PSB 350 U PSB 360 U UBS 320
400×32×2 (1,6)	8,5	Behringer	KS 190 KA KS 190 KS KS 190 N	575×50×2,5	10,5	Kasto	EBS 320 EBS 320 AU EBS 320 U
		Kasto	BSM 190/240 BSM 210/240 BSM 253 BSM 220 A BSM 250 RA VBS 242/252 WBS 210/230 PSB 200 AU PSB 250 U	600×50×2	10,5	Kasto	BSM 403 EBS 340 AU EBS 360 U PSB 400 U
400×38×2 (1,6)	8,5	Behringer	Super A 250 Super 252 190/240	650×50×2,5	10,5	Kasto	EBS 400 EBS 400 U EBS 400 AU
450×32×2 (1,8)	8,5	Ejvo	RC 45	700×50×2,5	10,5	Kasto	EBS 450 EBS 450 U EBS 460 U
450×38×2	10,5	Sajo	RC 230	850×60×3	10,5	Kasto	EBS 560 U
		Behringer	Super 222 HSA 250 HSA 260	1000×126×3,5	10,5	Kasto	PBS 630 PBS 630 A Pbs 632 PSB 632 A
450×38×2	8,5 – 10,5	Ejvo	LN 17/60 LN 17/69 A LN 17/73 LN 280 A	1160×150×4	10,5	Kasto	PSB 800 PBS 802