

**THESE SCALES ARE INTENDED FOR STATIC WEIGHING  
AND MUST NOT BE PART OF LIFTING EQUIPMENT -**

- Unpack and remove all packaging, hang the scales in a stable suspension device of the correct size for the application (the capacity of the scales + the unloaded weight of the scales + safety margin).
- Check that all hooks, eyes and link chains are entirely intact.
- Pull on the hook a few times.
- If the weight indicator does not display “0”, adjust with the grooved resetting device (on the upper side of the scales).

**NB!**

- The object to be weighed must not be designed in such a manner that it could cause damage, e.g. through its size causing the suspension or removal from the scales’ hook to be made difficult.
- The object to be weighed is to be able to be fixed to the hook on the scales in a safe manner so that it does not come loose and cause injury.
- The device onto which the scales are fixed must be designed and of a suitable size for the scales so that the scales and their load cannot come loose and cause injury.