


# GARDENTOP

## Trinramme

Montageanleitung  
Installation instruction

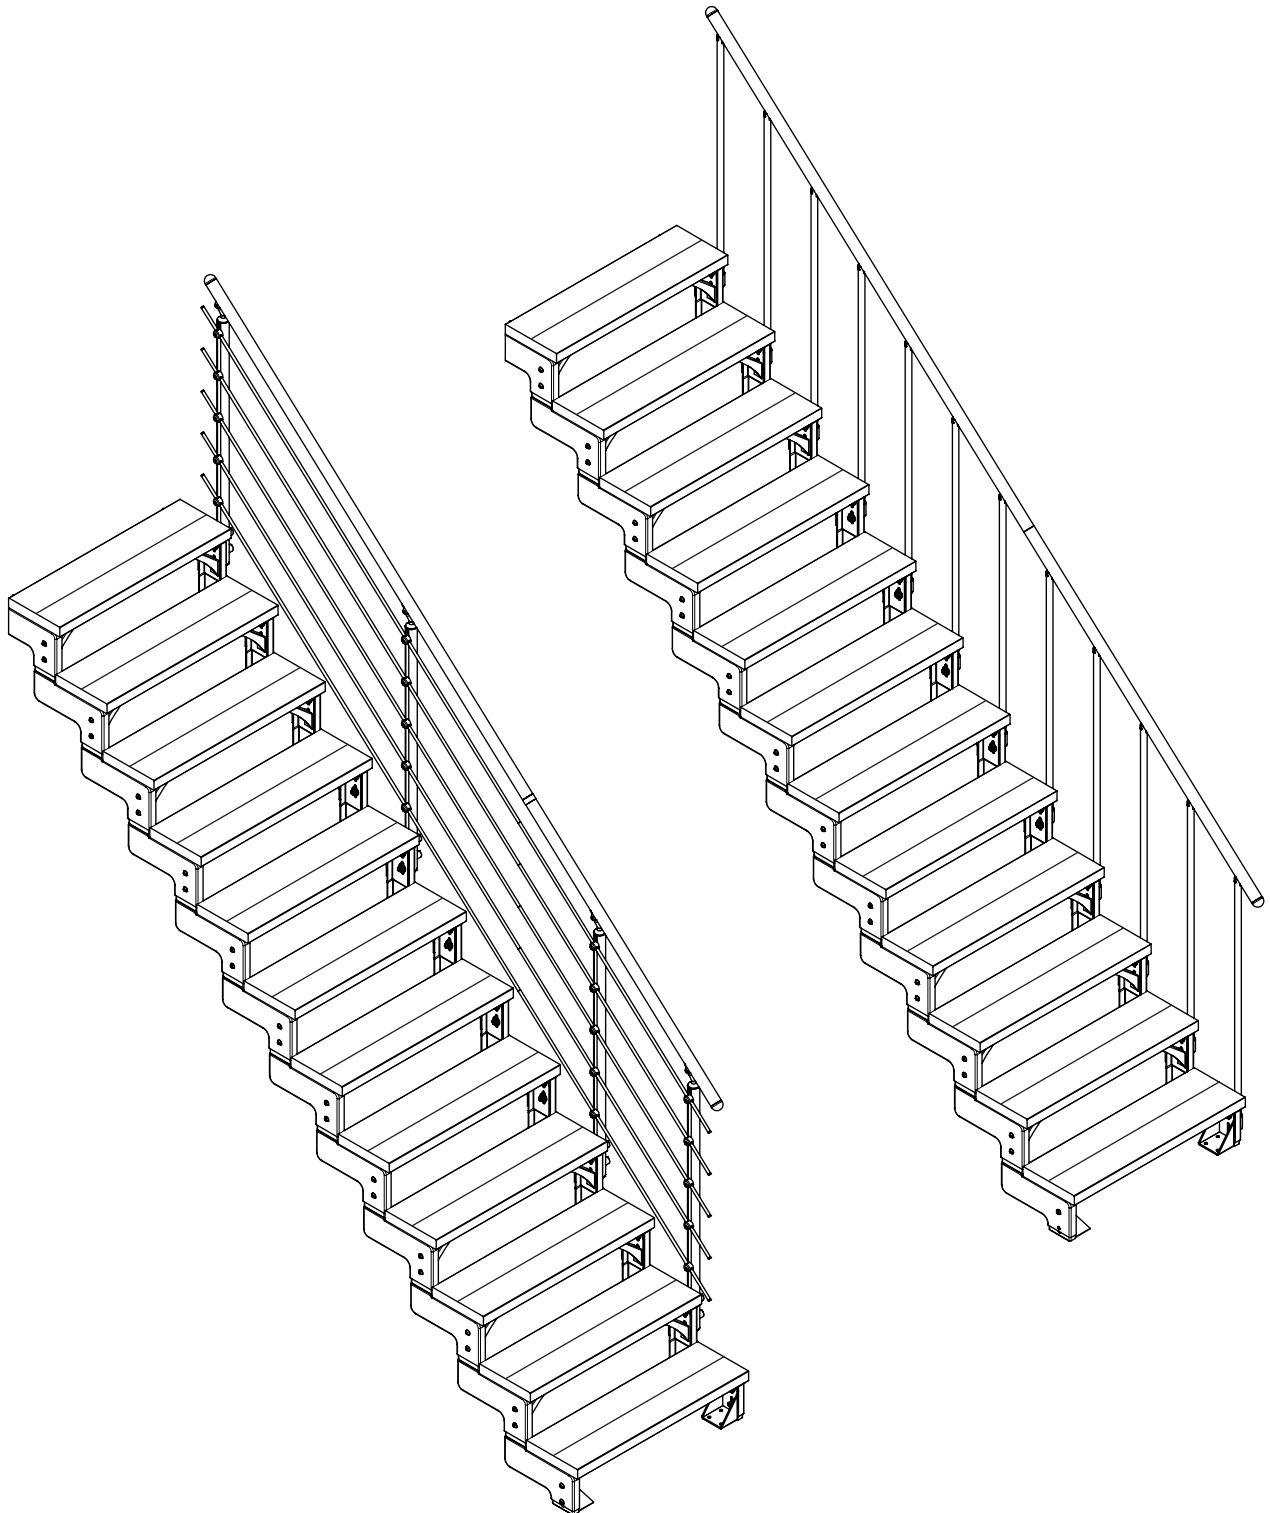


<b>68010</b>		<b>Starter-Set Start kit</b>			
<p>(1) (2)</p> <p>× 1 K2-41041      × 1 K2-41040</p>		<p>(5) (6)</p> <p>× 1 K1-41011      × 1 K1-41010</p>		<p>(7)</p> <p>× 2 K2-41000</p>	
<p>(40)</p> <p>× 8 K3-02045 M10×25</p>	<p>(41)</p> <p>× 8 K3-04110 Ø10</p>	<p>(42)</p> <p>× 8 K3-04099 Ø10</p>	<p>(43)</p> <p>× 8 K3-03051 M10</p>	<p>(44)</p> <p>× 16 K3-08001 Ø12×60mm</p>	<p>(45)</p> <p>× 16 K3-06070 Ø10×60mm</p>
<p>(55)</p> <p>× 8 K3-04016 Ø6</p>	<p>(56)</p> <p>× 8 K3-03046 M6</p>	<p>(58)</p> <p>× 8 K3-02220 M6×20</p>	<p>(59)</p> <p>× 12 K3-06269 Ø6×35</p>		

<b>68011</b>		<b>Ergänzungs-Set 1 step kit</b>			
<p>(3) (4)</p> <p>× 1 K1-41021      × 1 H1-41020</p>		<p>(40)</p> <p>× 4 K3-02045 M10×25</p>	<p>(41)</p> <p>× 4 K3-04110 Ø10</p>	<p>(42)</p> <p>× 4 K3-04099 Ø10</p>	<p>(43)</p> <p>× 4 K3-03051 M10</p>
<p>(55)</p> <p>× 8 K3-04016 Ø6</p>	<p>(56)</p> <p>× 8 K3-03046 M6</p>	<p>(58)</p> <p>× 8 K3-02220 M6×20</p>	<p>(59)</p> <p>× 12 K3-06269 Ø6×35</p>		

**Stufen-Rahmen**  
**Step frame**

8 9

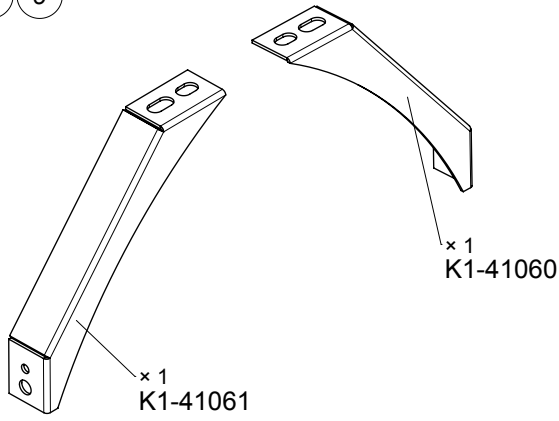

40



x 2  
K3-02045  
M10x25

42




x 2  
K3-04099  
Ø10

43




x 2  
K3-03051  
M10

24

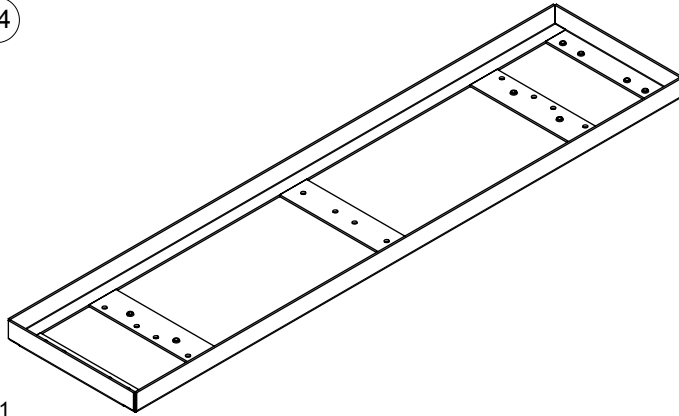

x 1  
K2-41120

25



x 6  
K1-41129

55



x 6  
K3-04016  
Ø6

62



x 6  
K3-02222  
M6x12

63





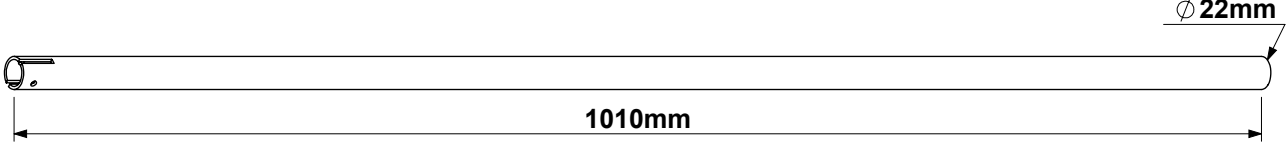
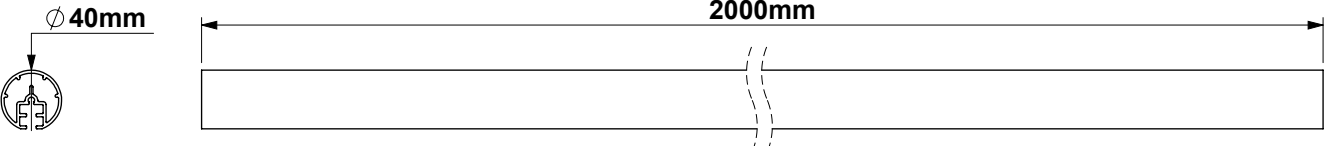









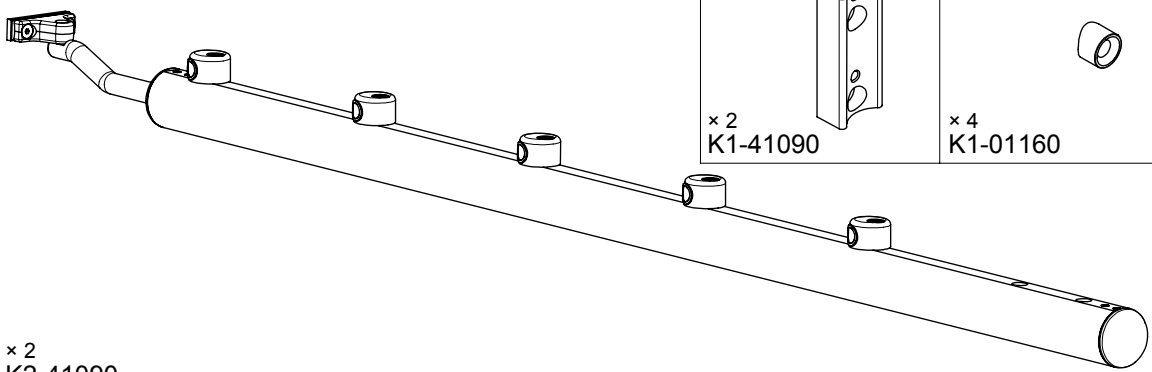







x 2  
K3-02226  
M6x16

64

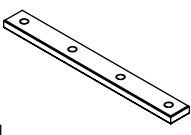










x 12  
K3-06286  
Ø5x30

68030		<i>Steiggeländer für 6 Stufen Standard banister 6 steps</i>			
14  × 6 K2-41050	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040		
18  × 6 K1-41055 1010mm Ø 22mm					
19  × 1 K1-01100 Ø 40mm 2000mm					
46  × 6 K3-01004 M4×25	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6×8	49  × 2 K3-06004 ST 4,8×20	50  × 16 K3-01005 M5×12	53  × 4 K3-05050 M5×12

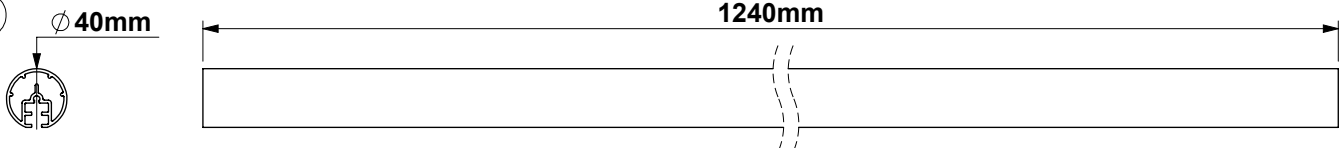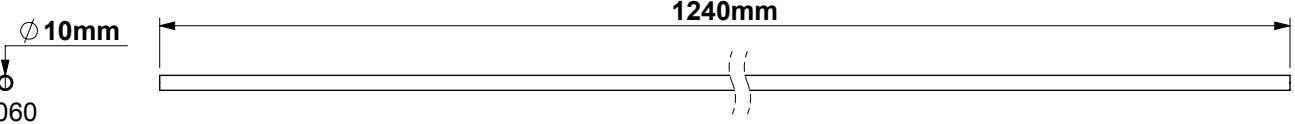68040		<i>Steiggeländer PROVA Starter-Set PROVA banister start</i>			
17  × 2 K2-04040	20  × 2 K2-41090			21  × 2 K1-41090	22  × 4 K1-01160
26  × 1 K1-01107 Ø 40mm 1240mm					
27  × 5 K1-18060 Ø 10mm 1240mm					
28  × 10 K1-01010	49  × 2 K3-06004 ST 4,8×30	51  × 4 K3-02010 M10×70			


**68041**

**Steiggeländer PROVA Ergänzungs-Set  
PROVA banister extension**

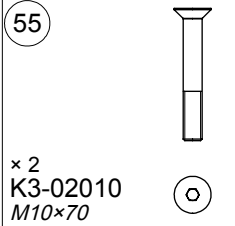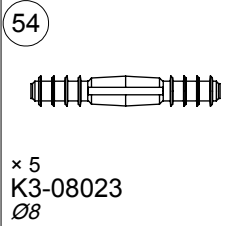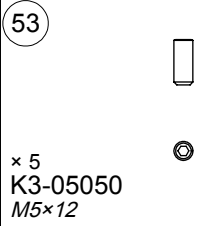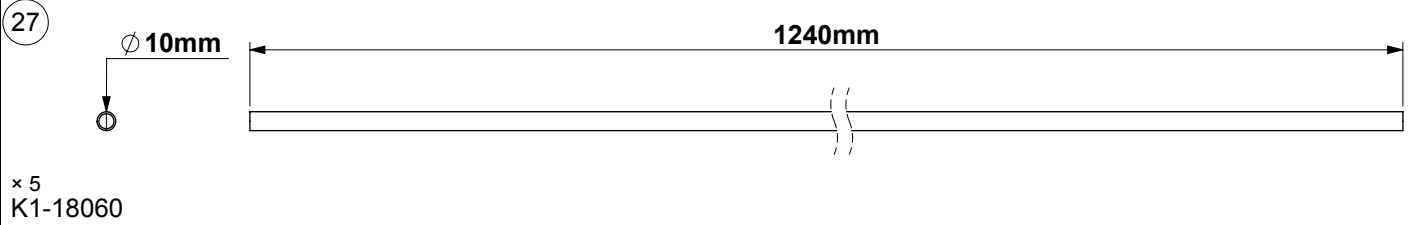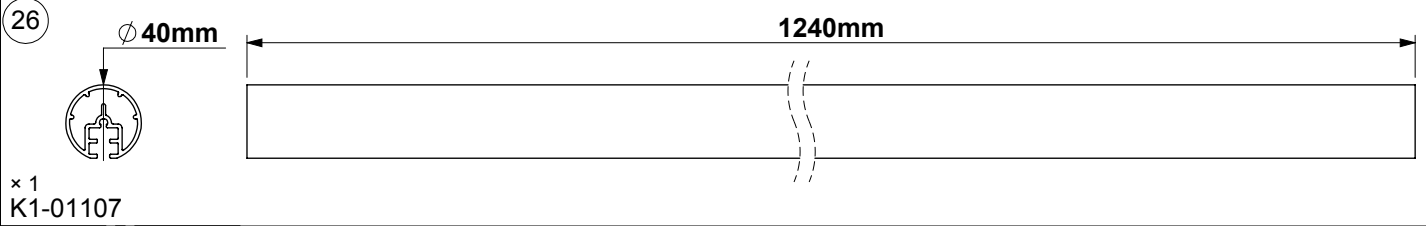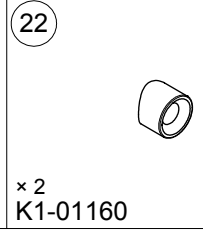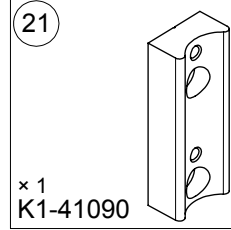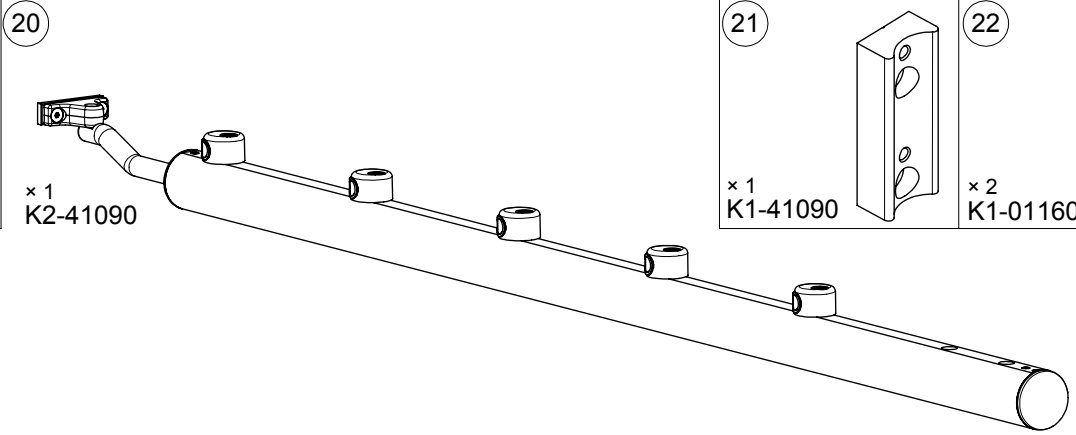
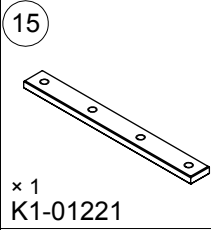










1

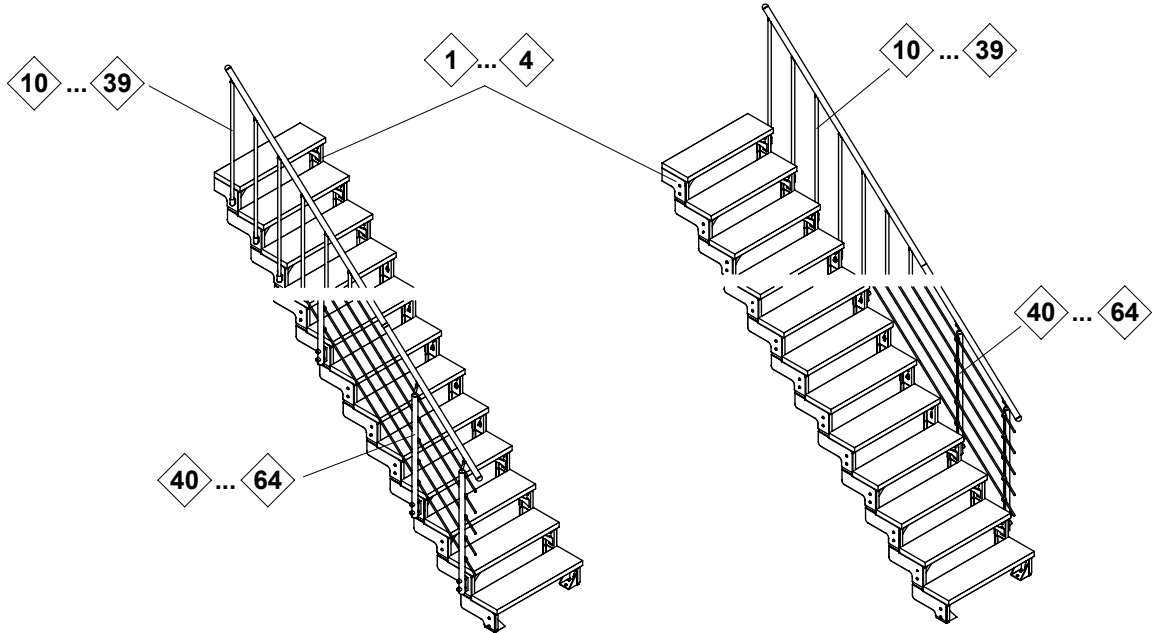




2


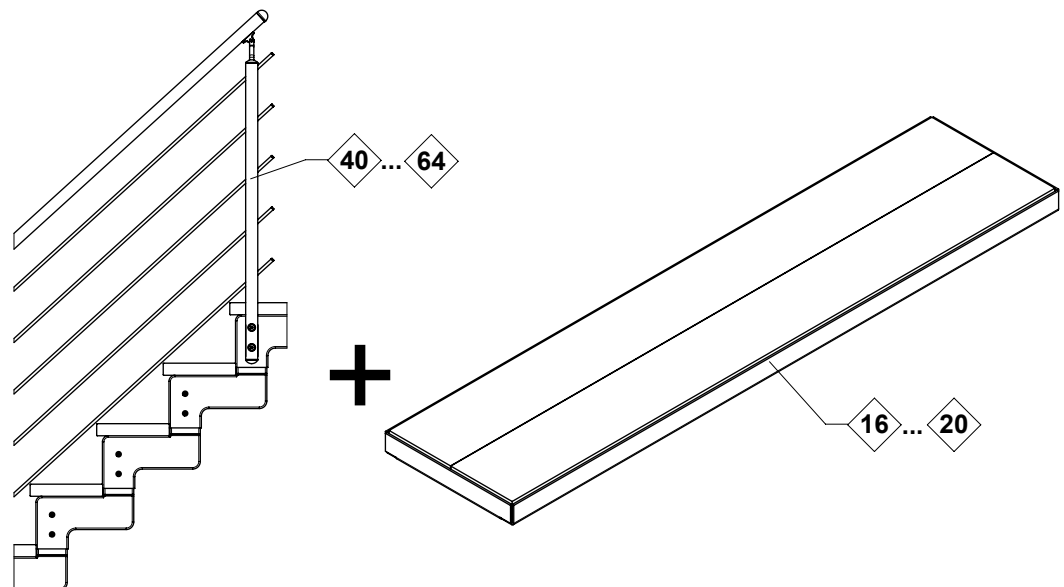
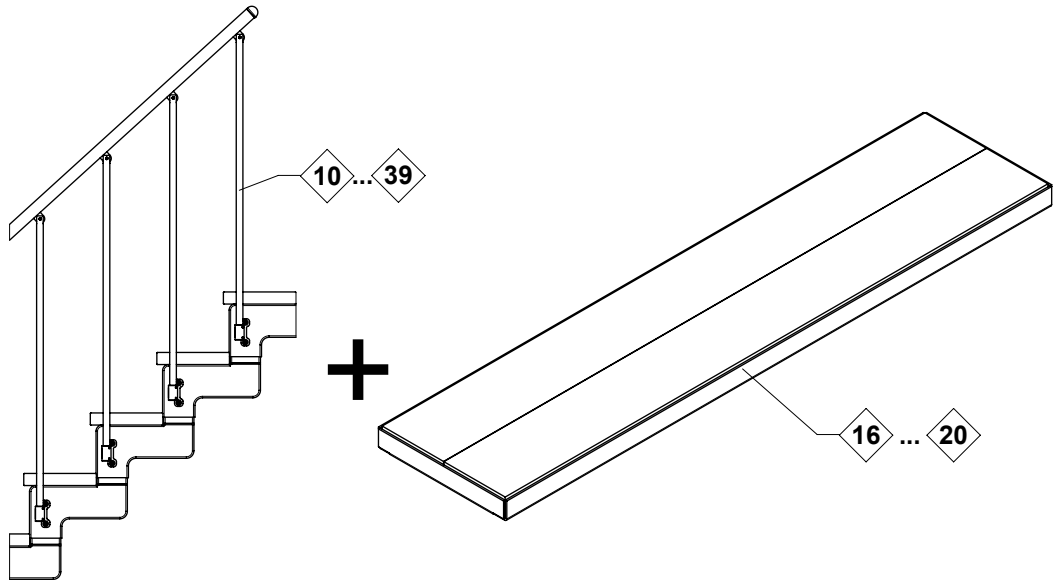


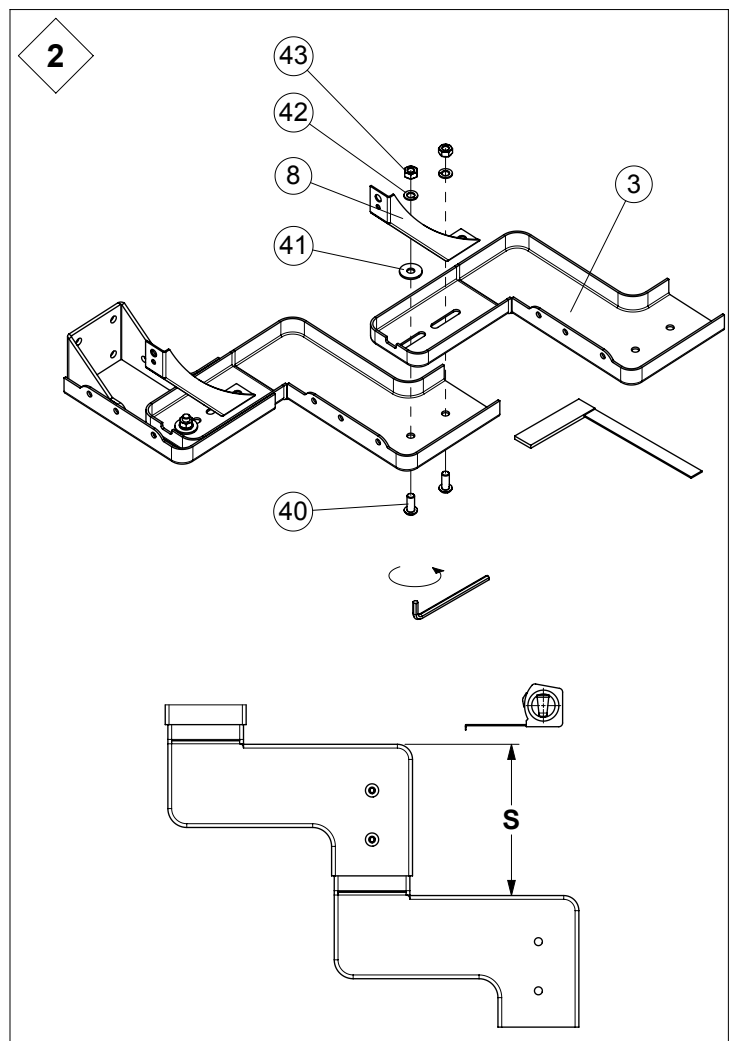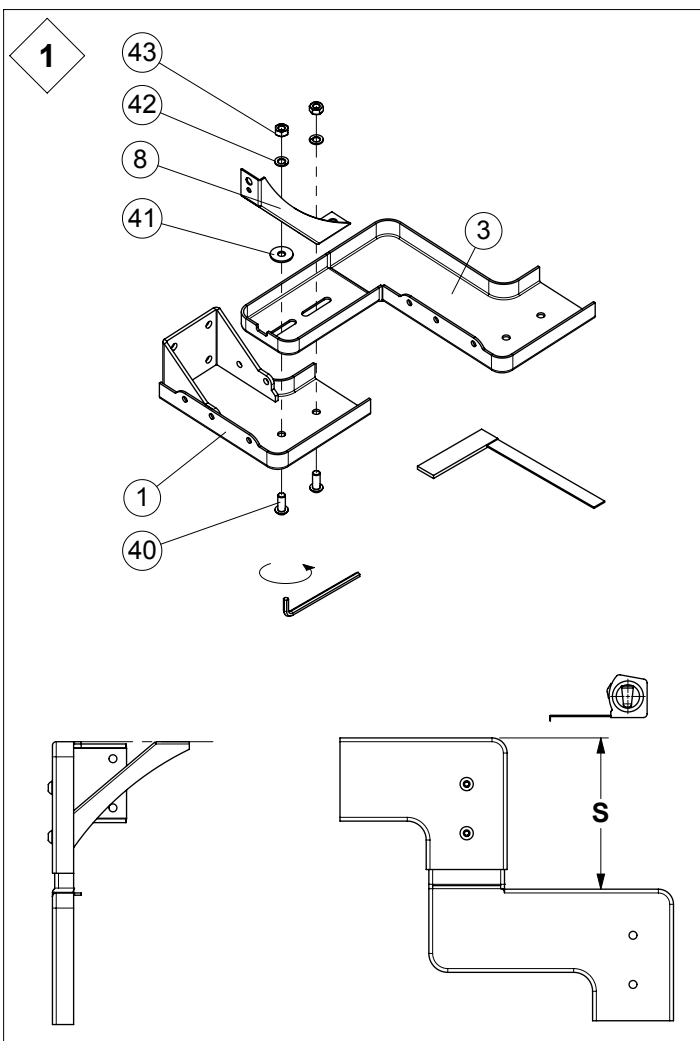
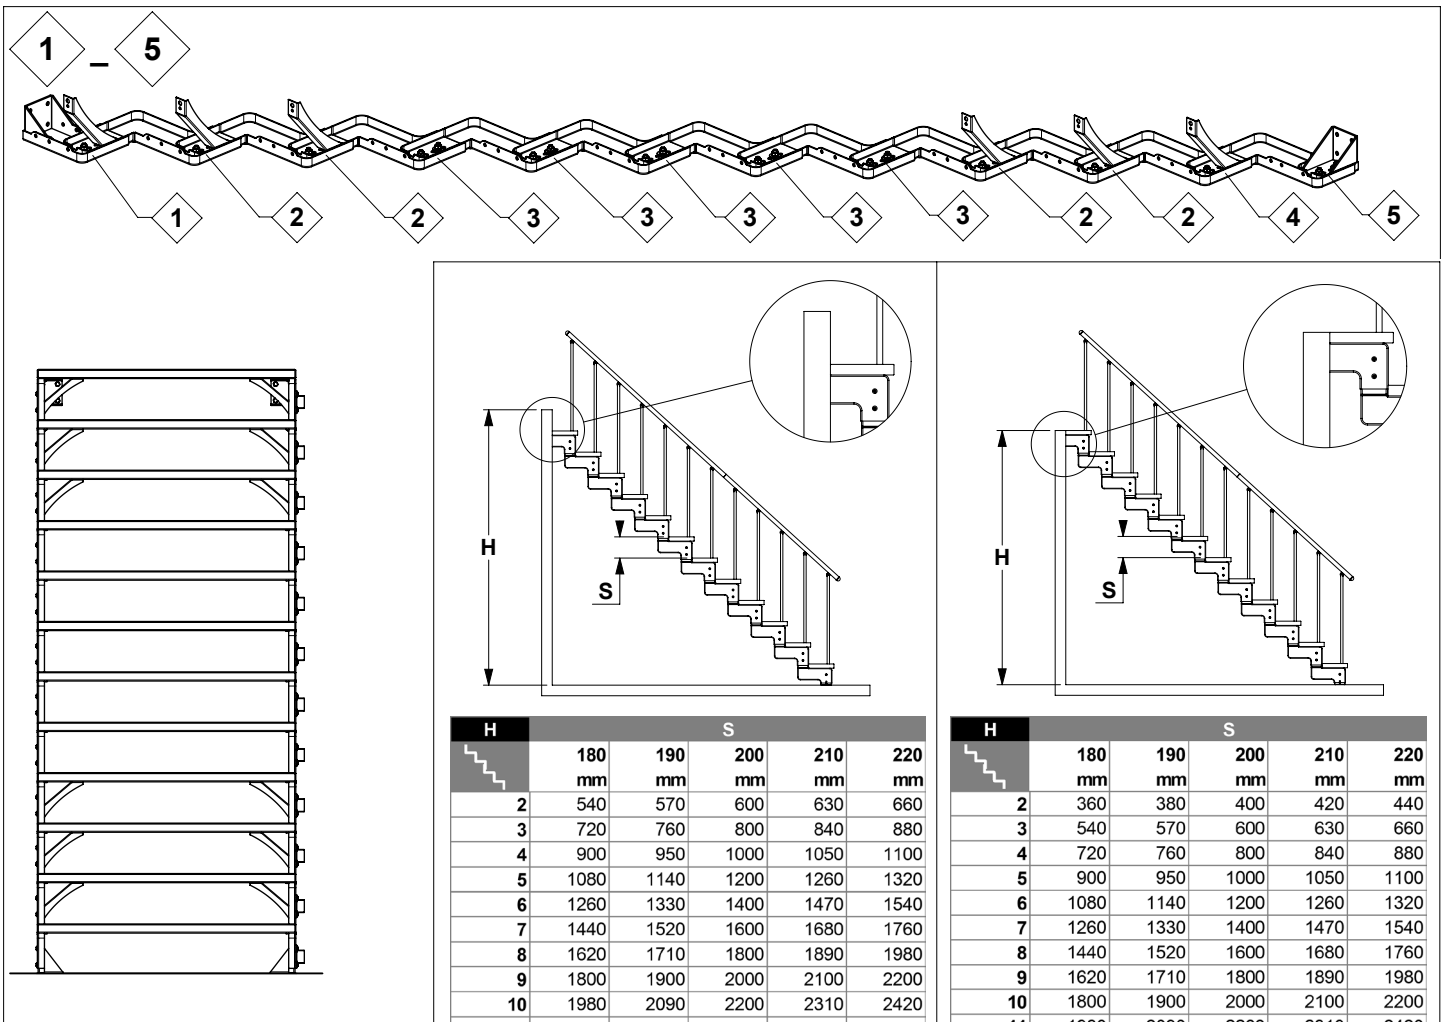


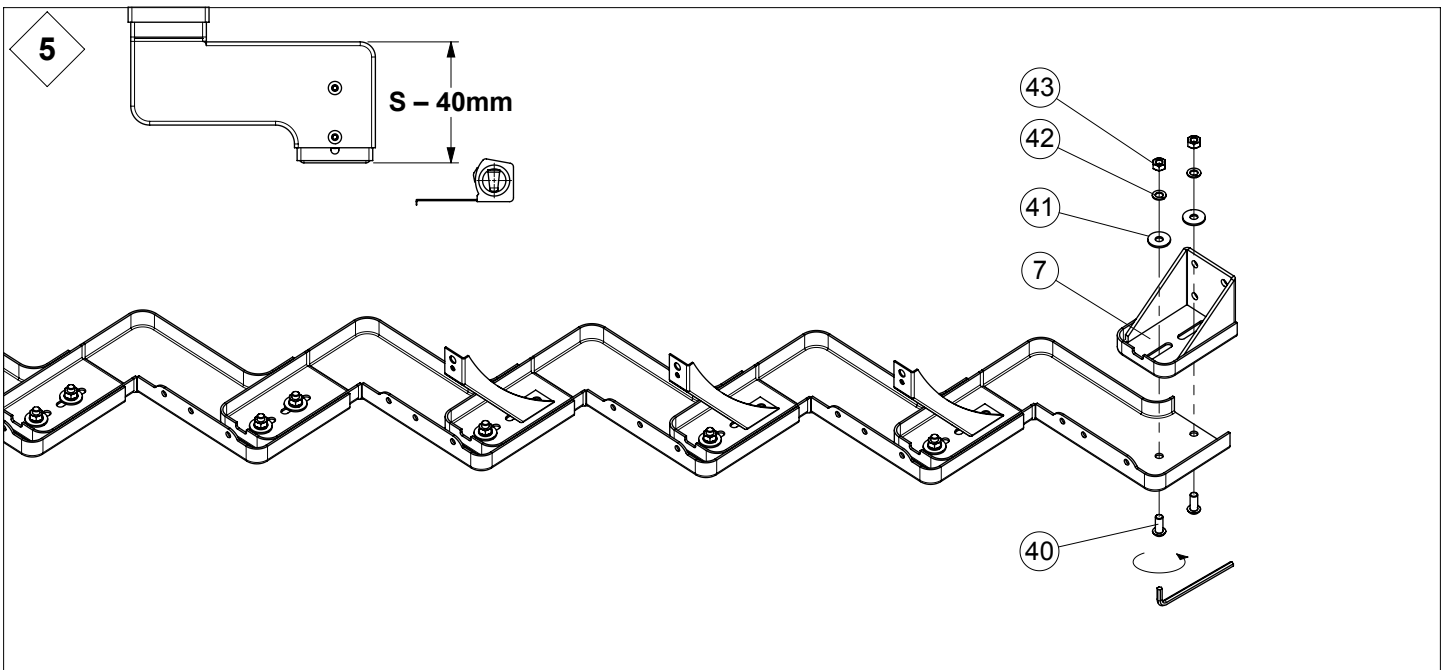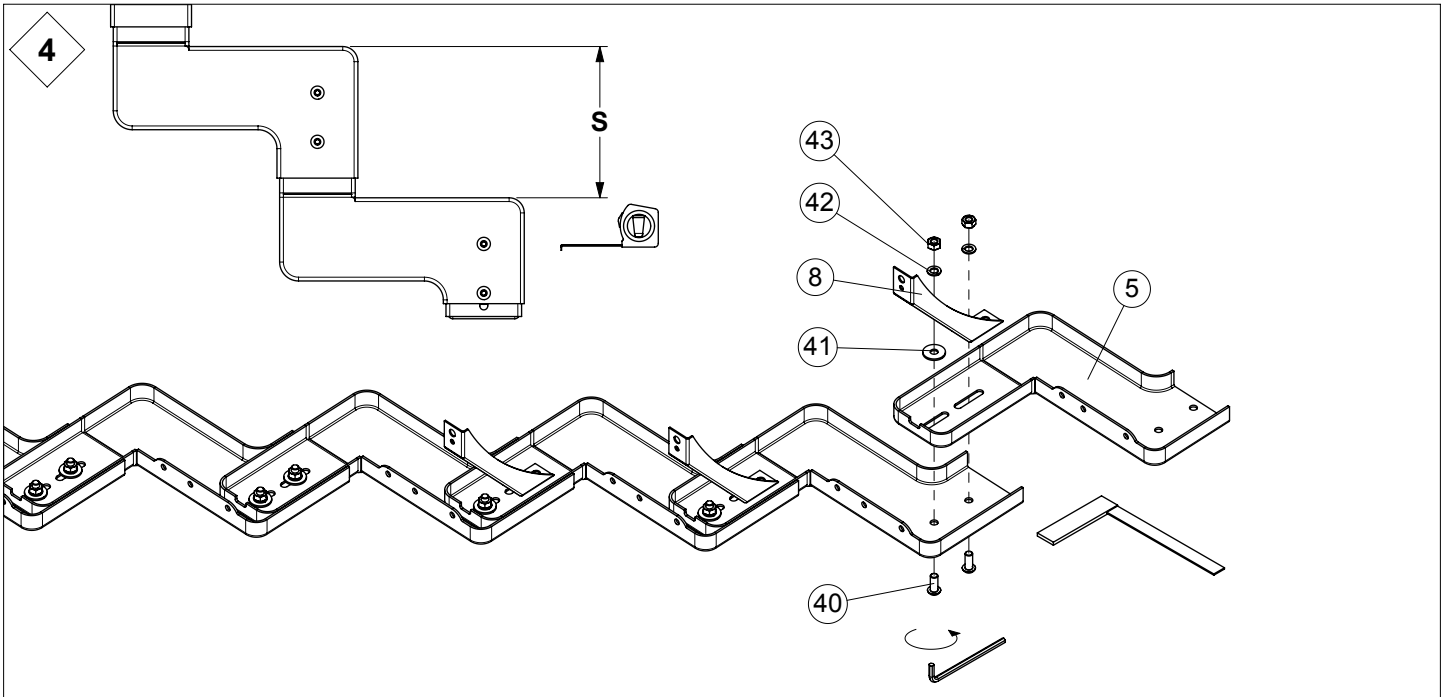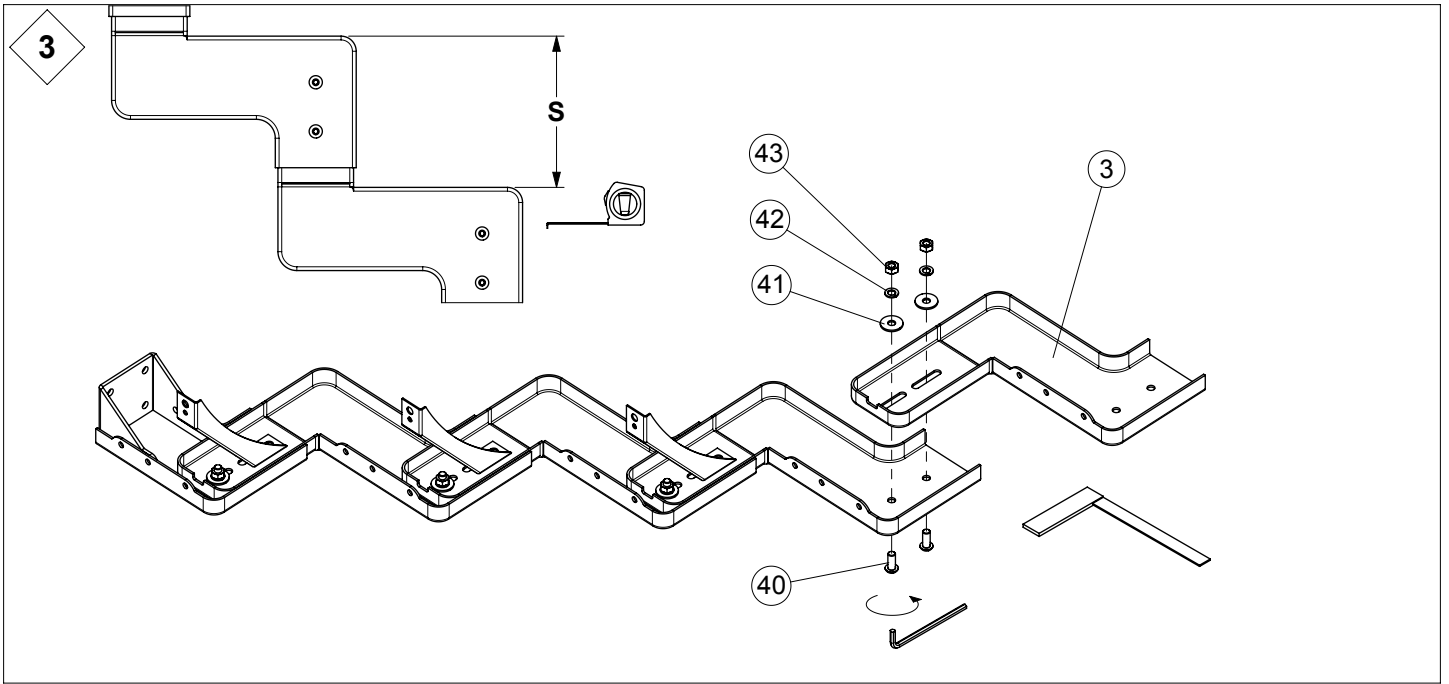




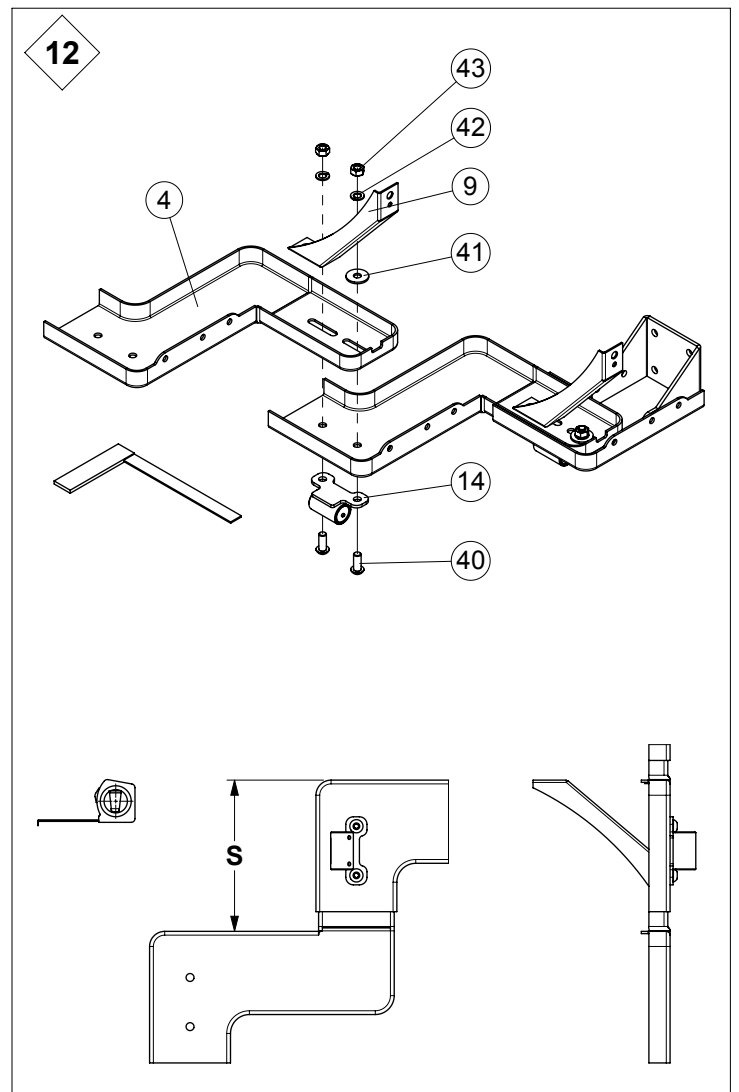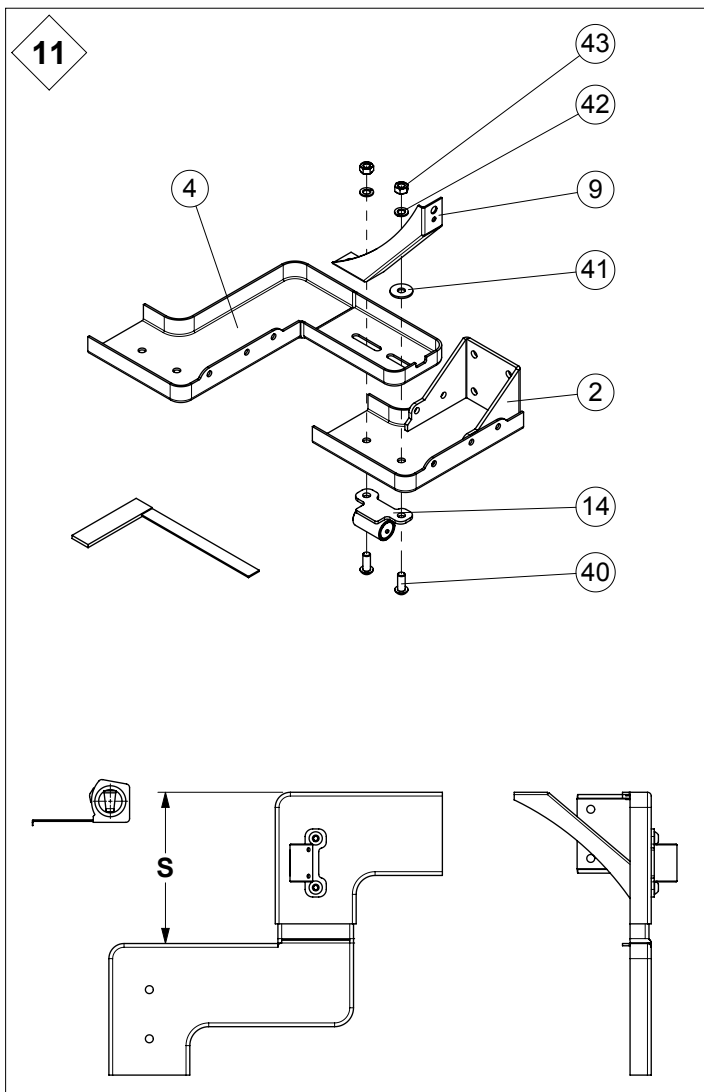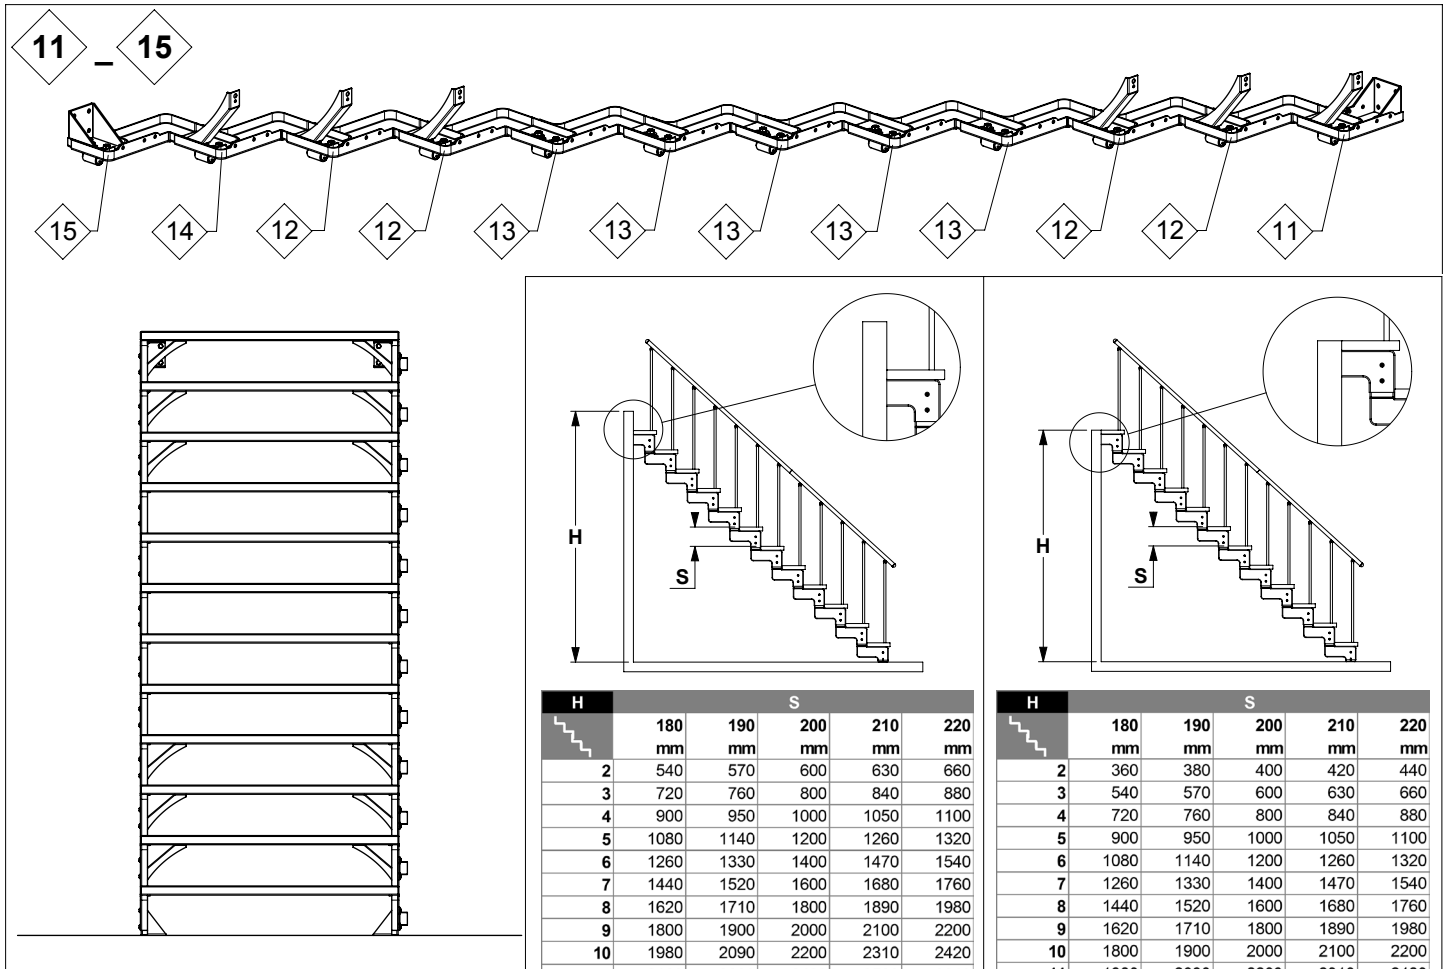

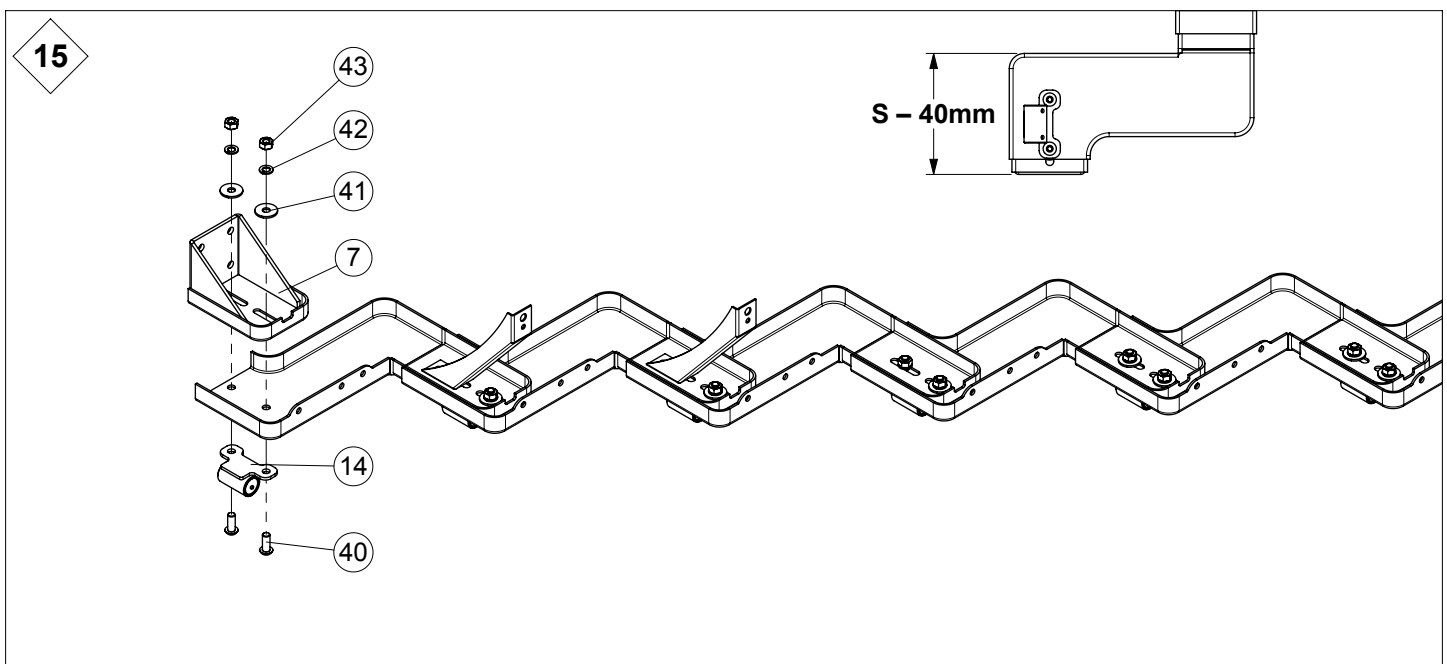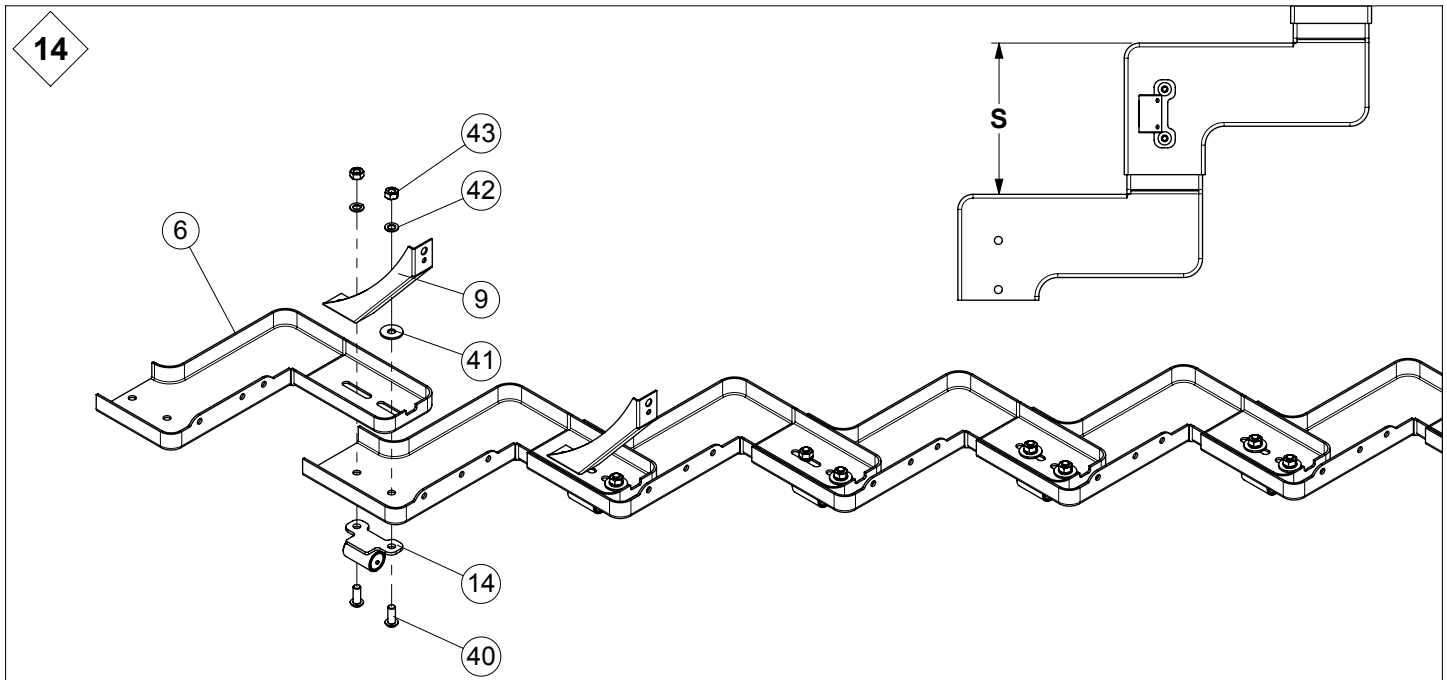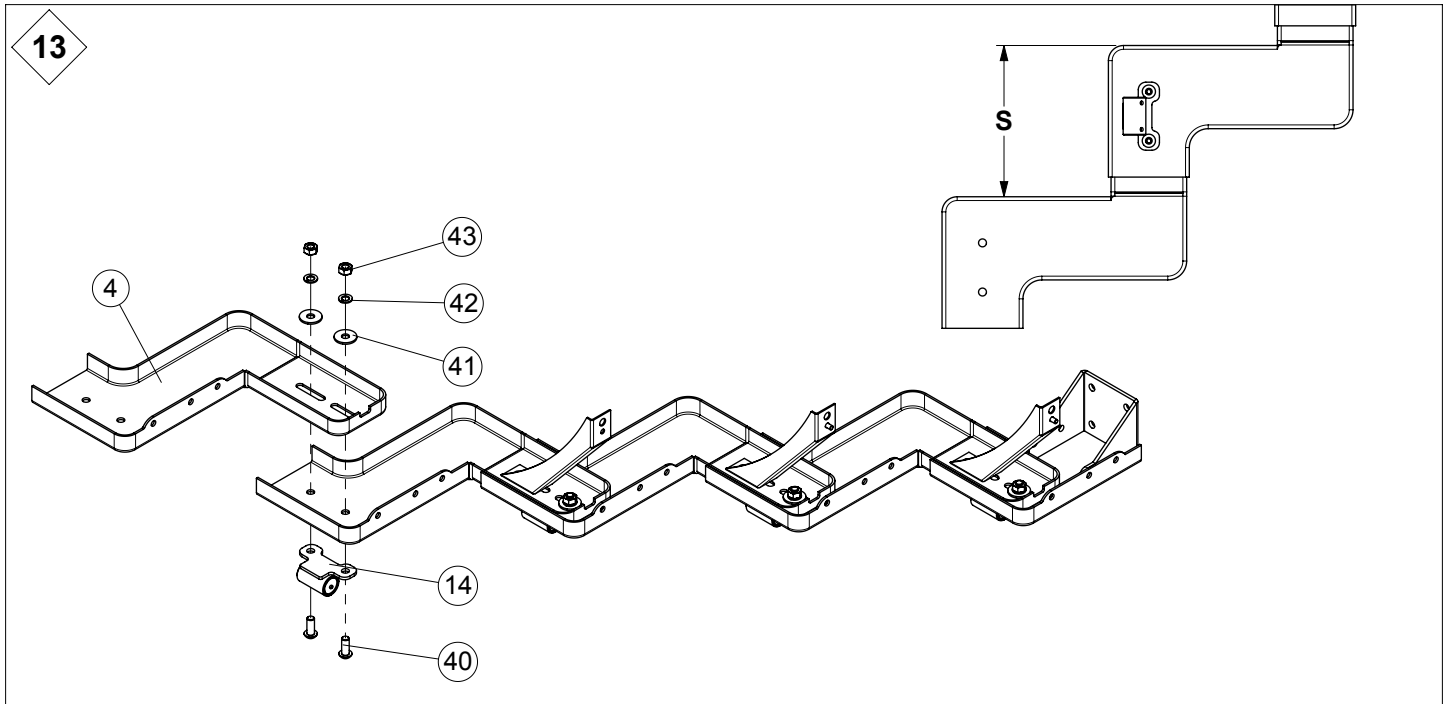


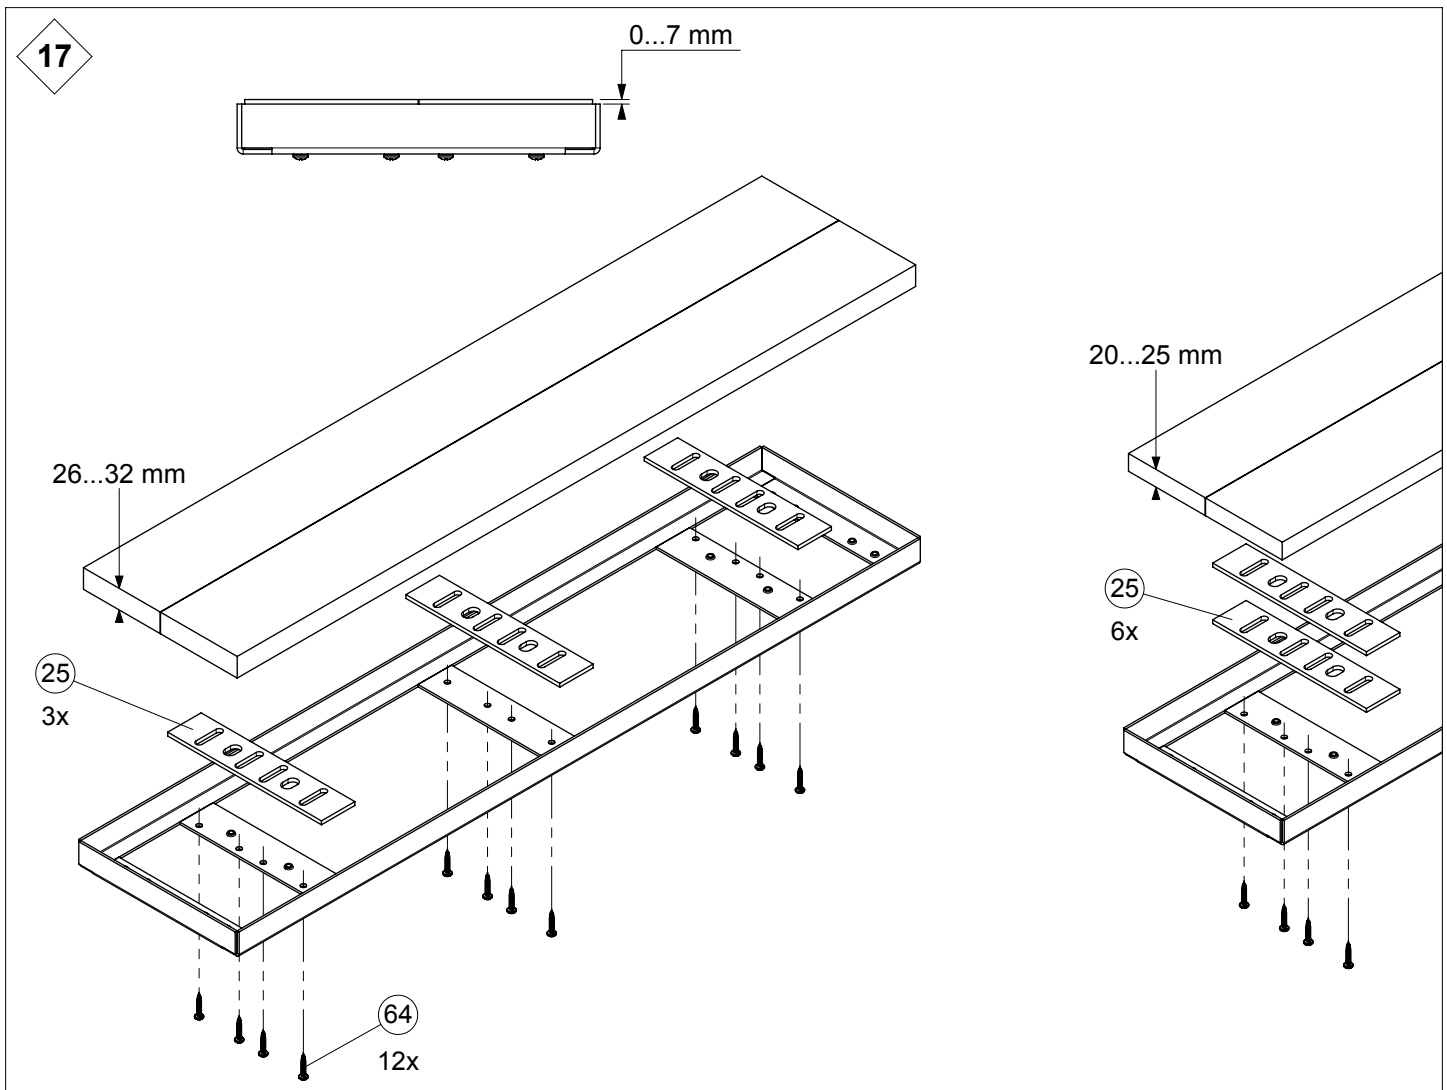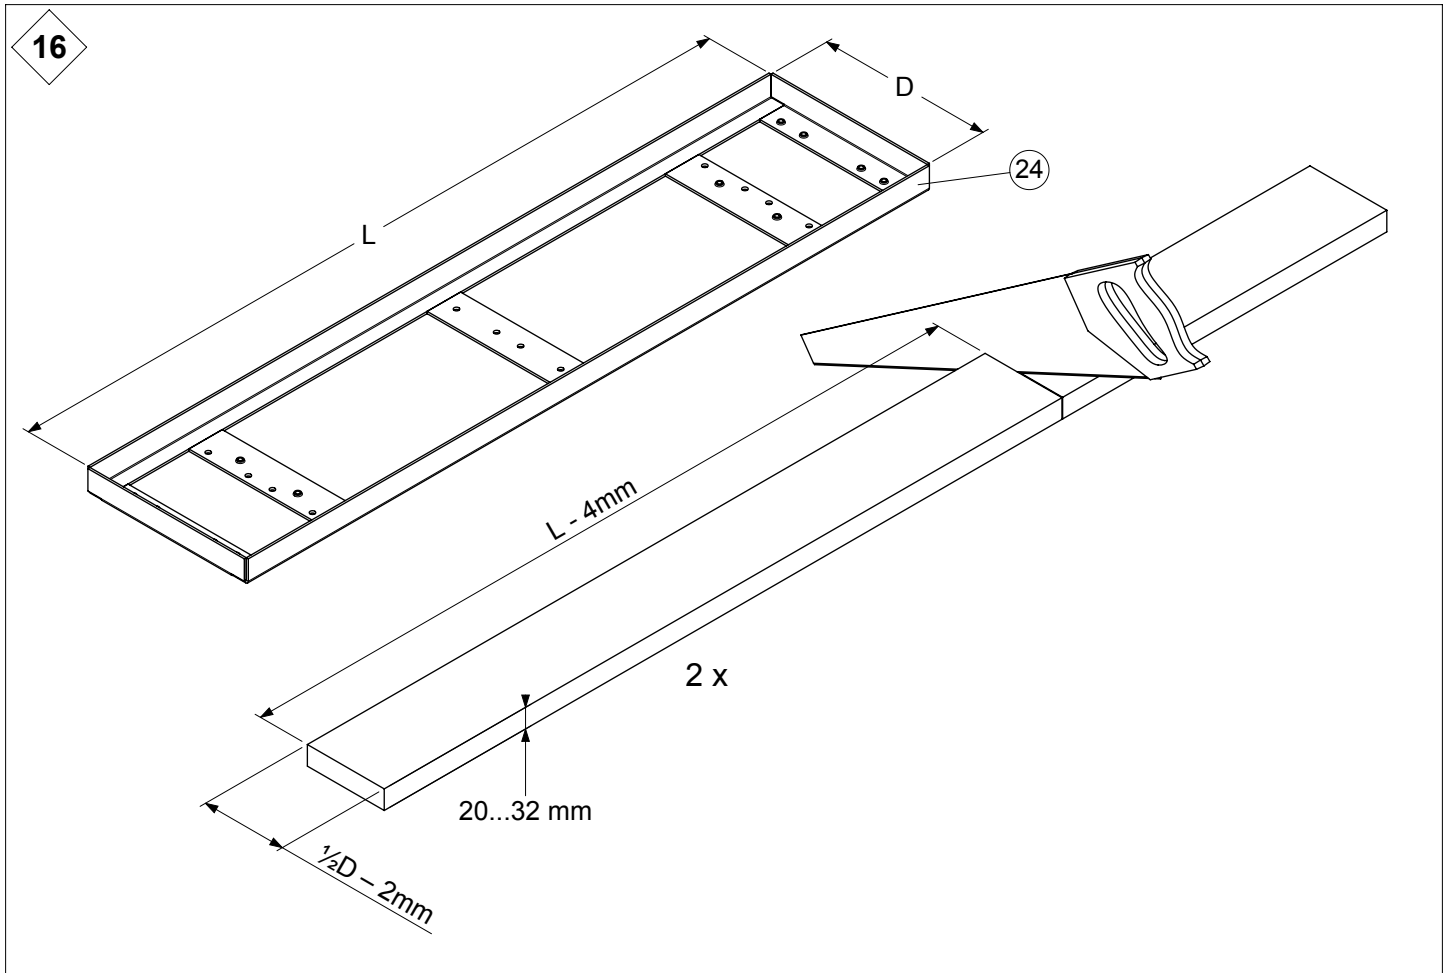


18

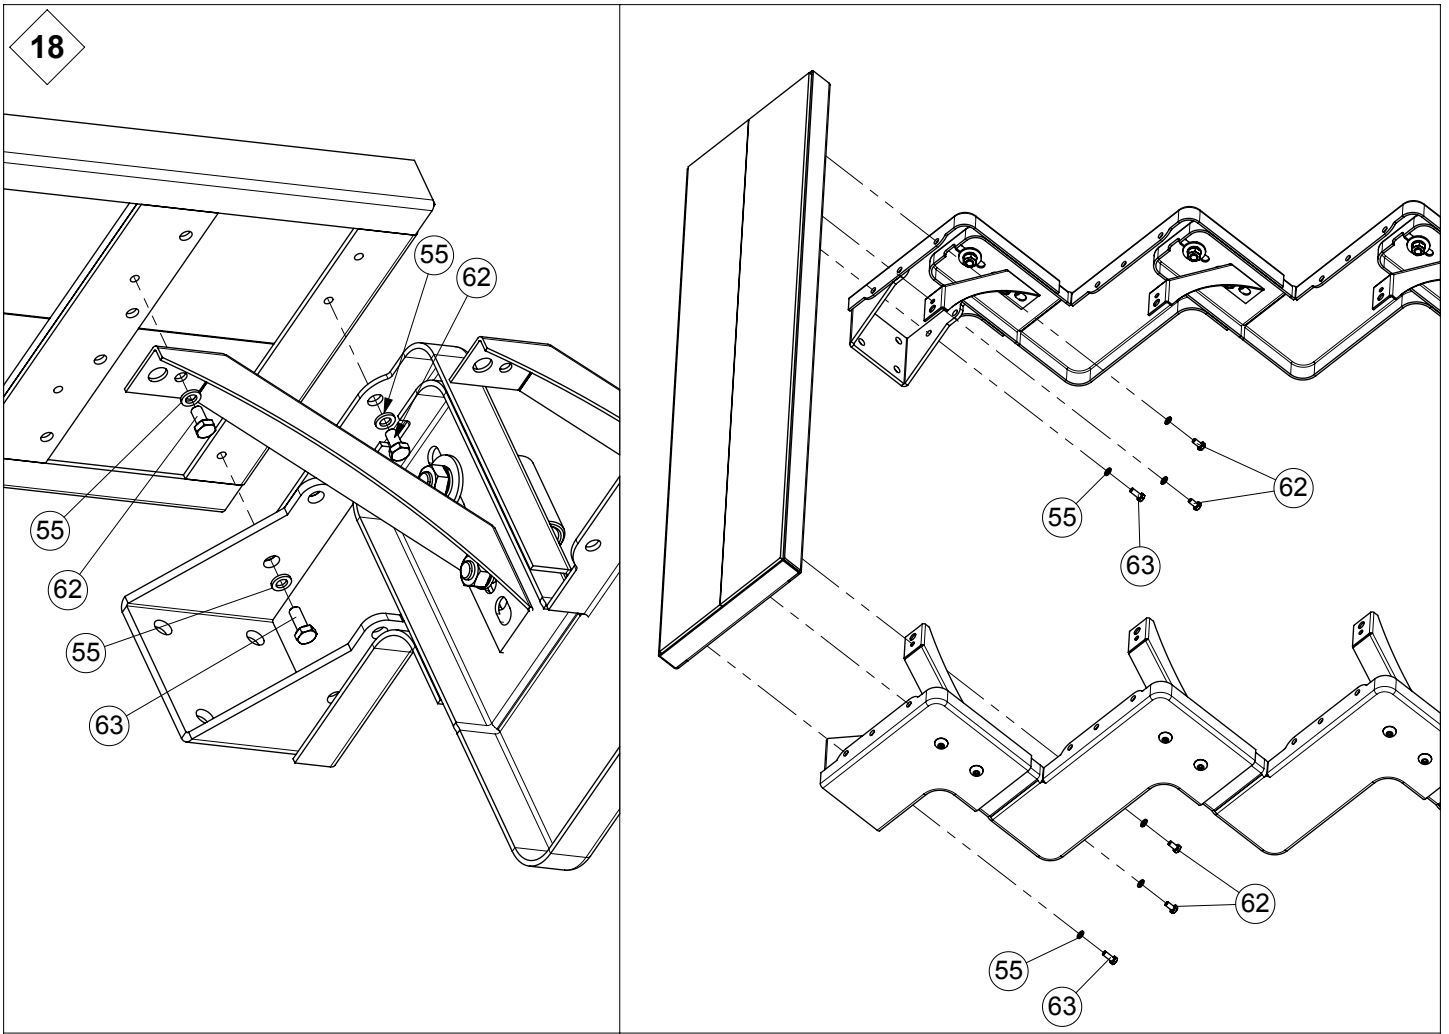


19




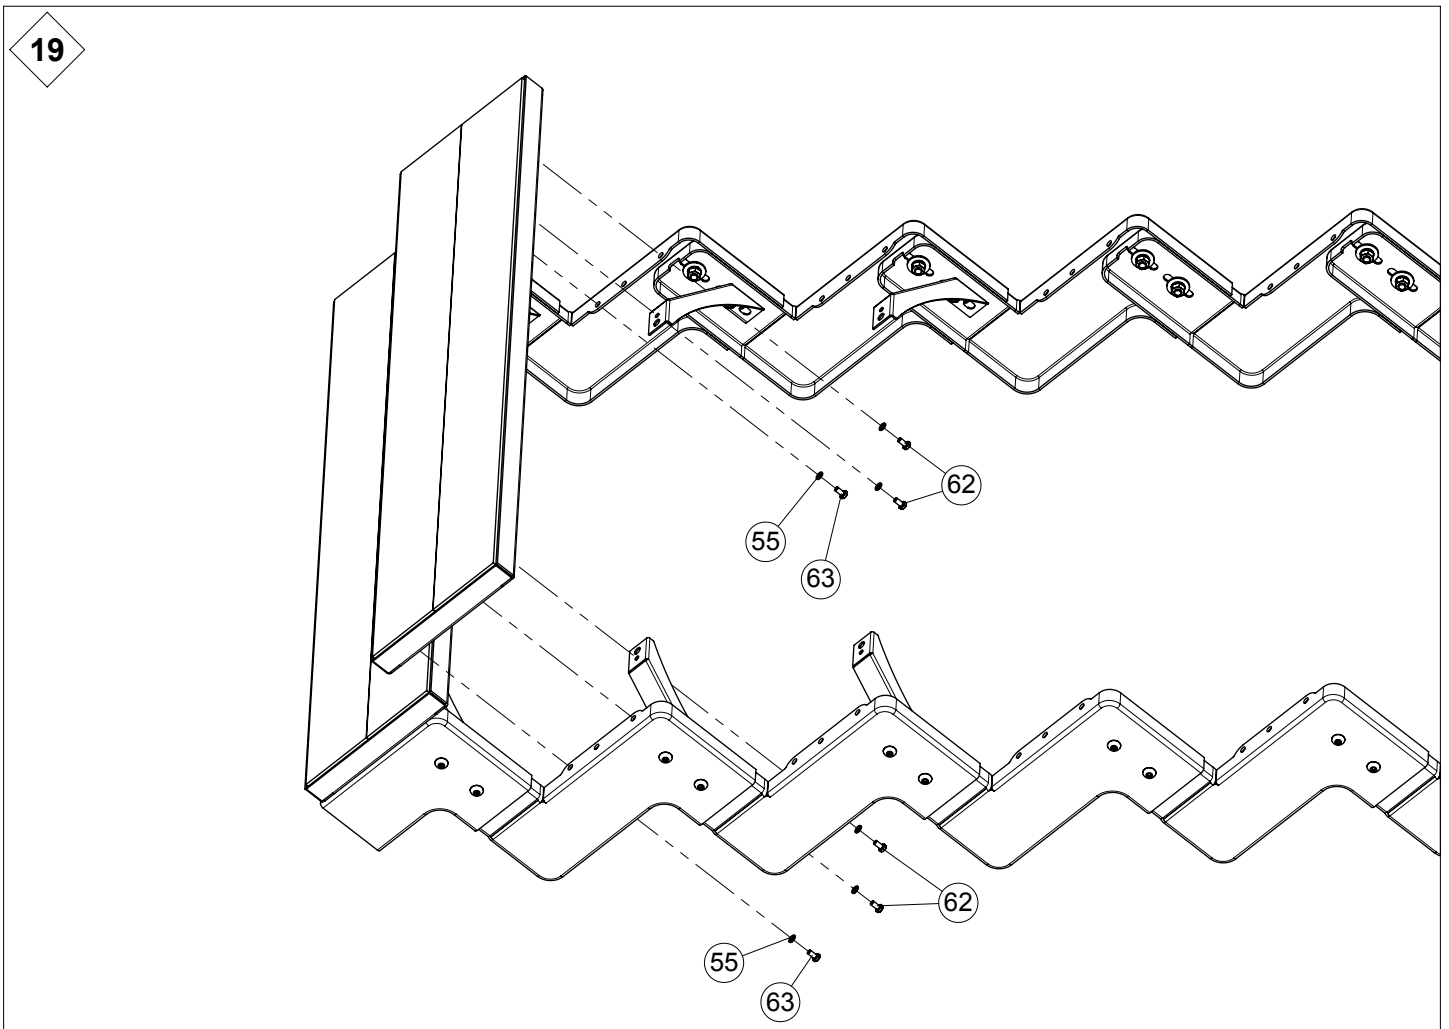






20



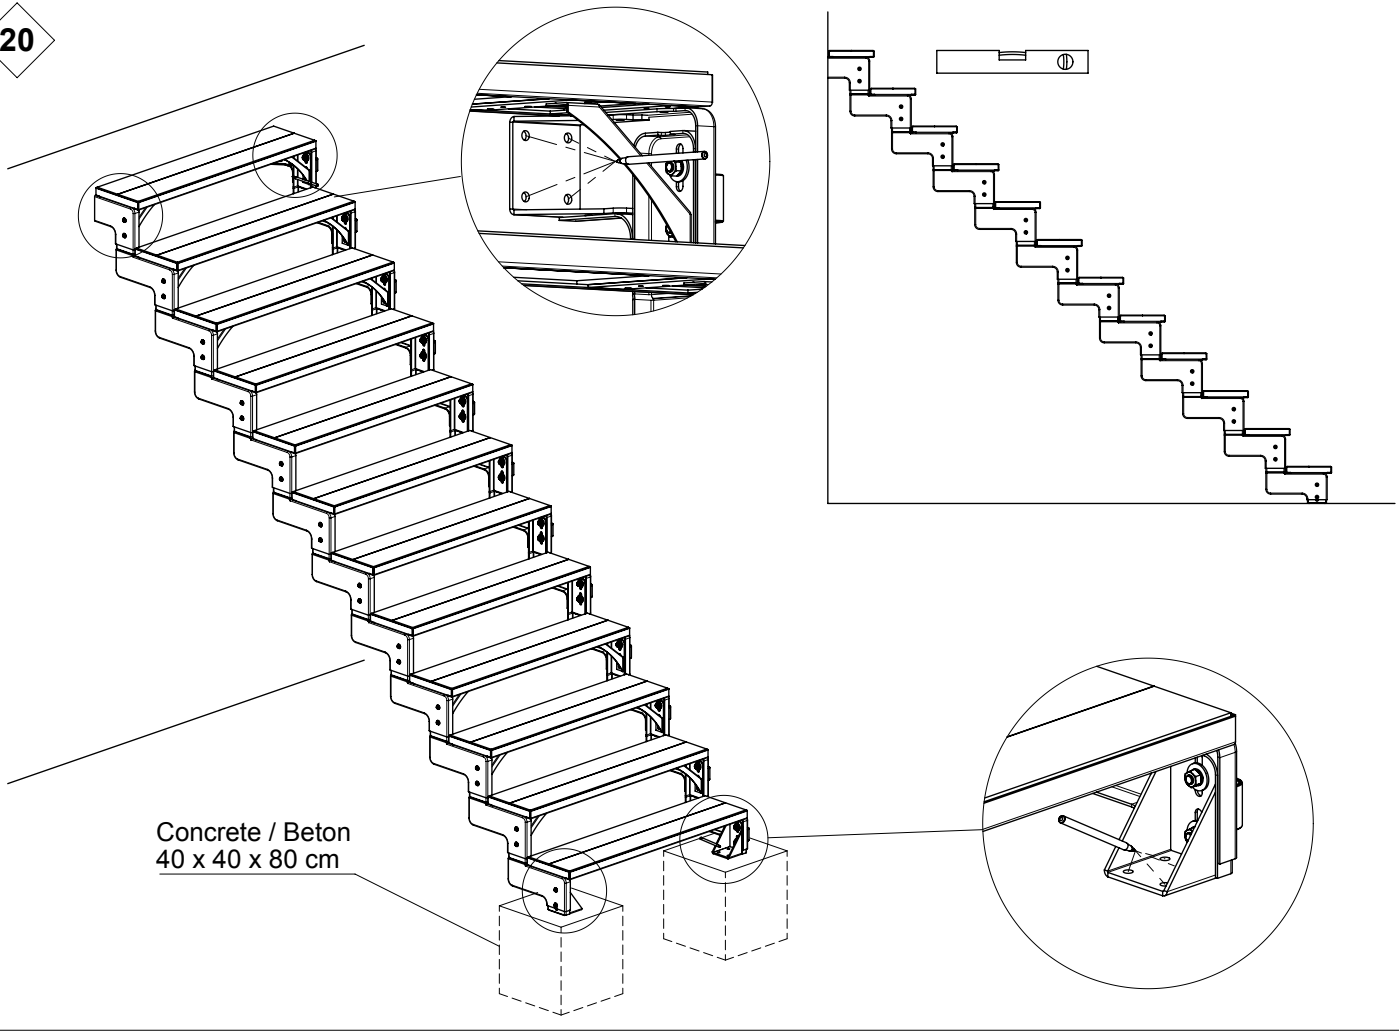


21



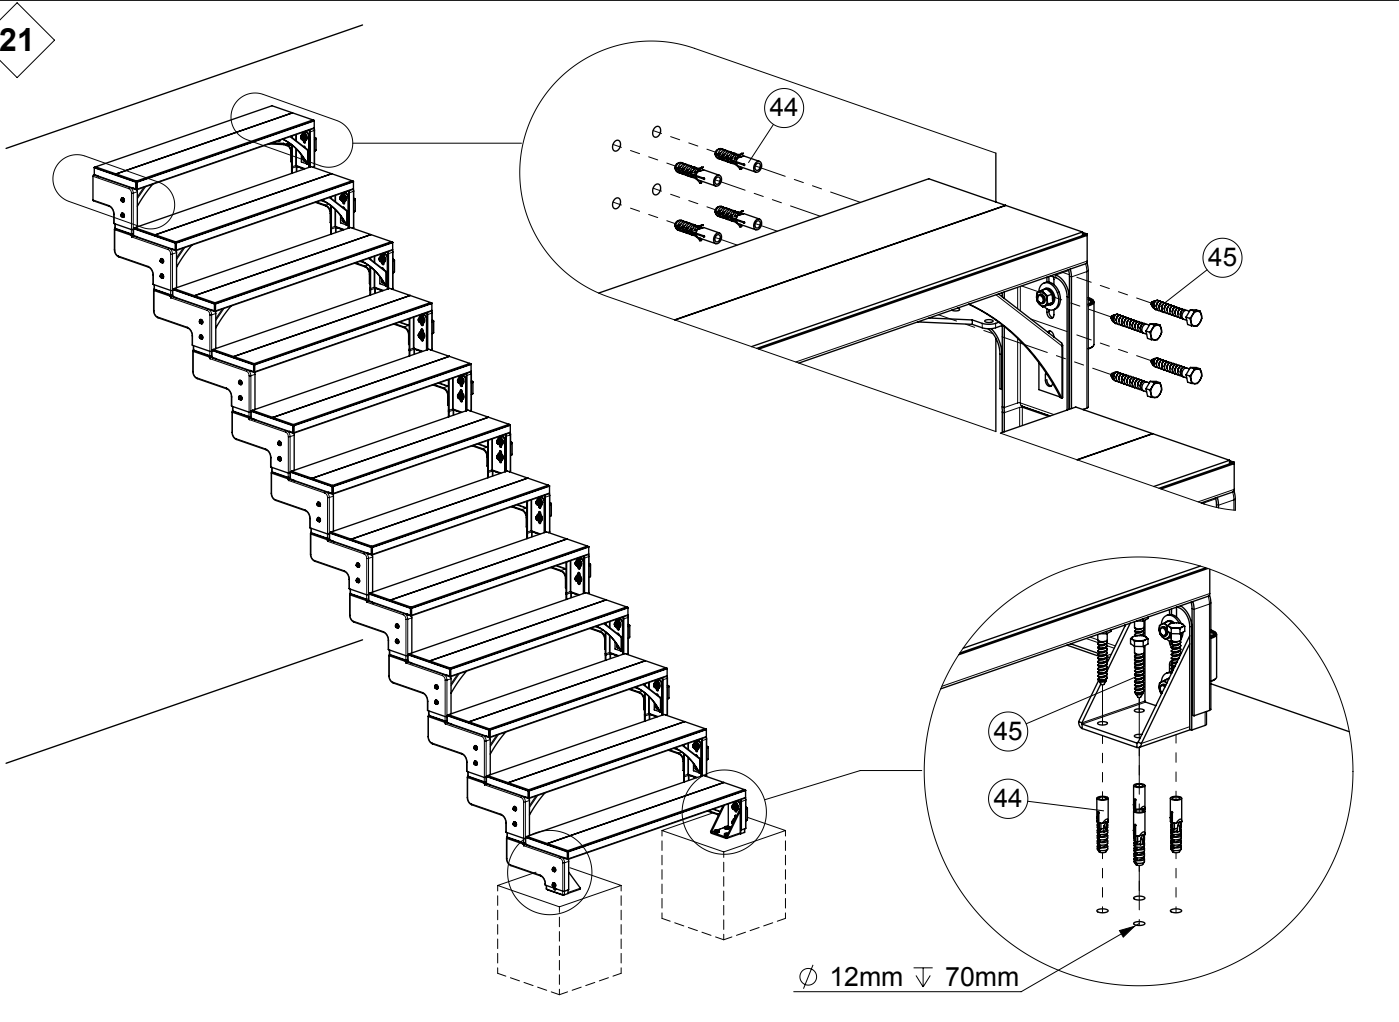


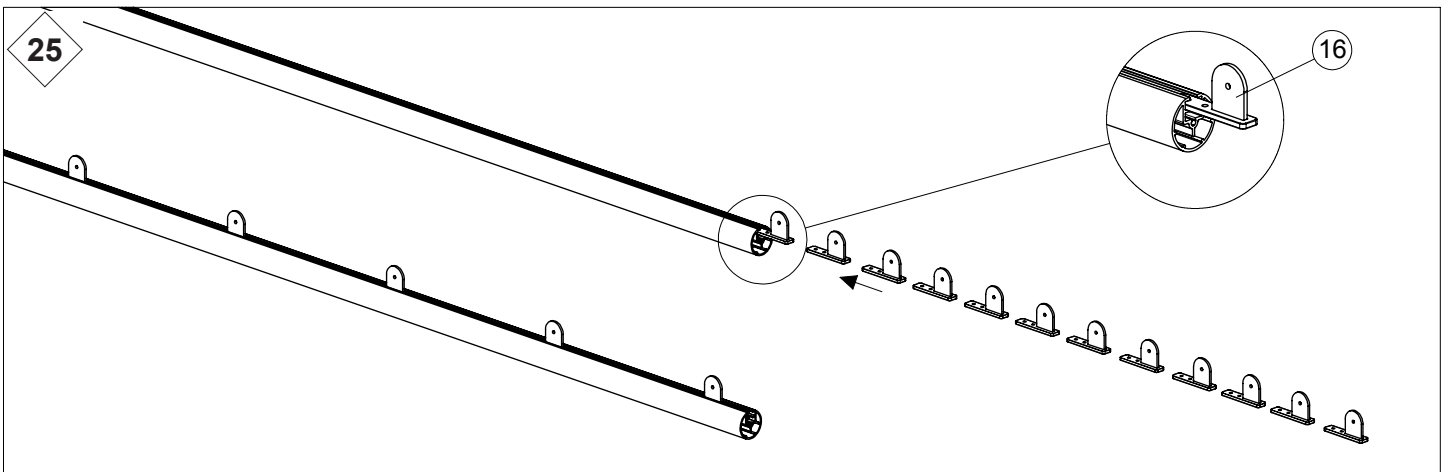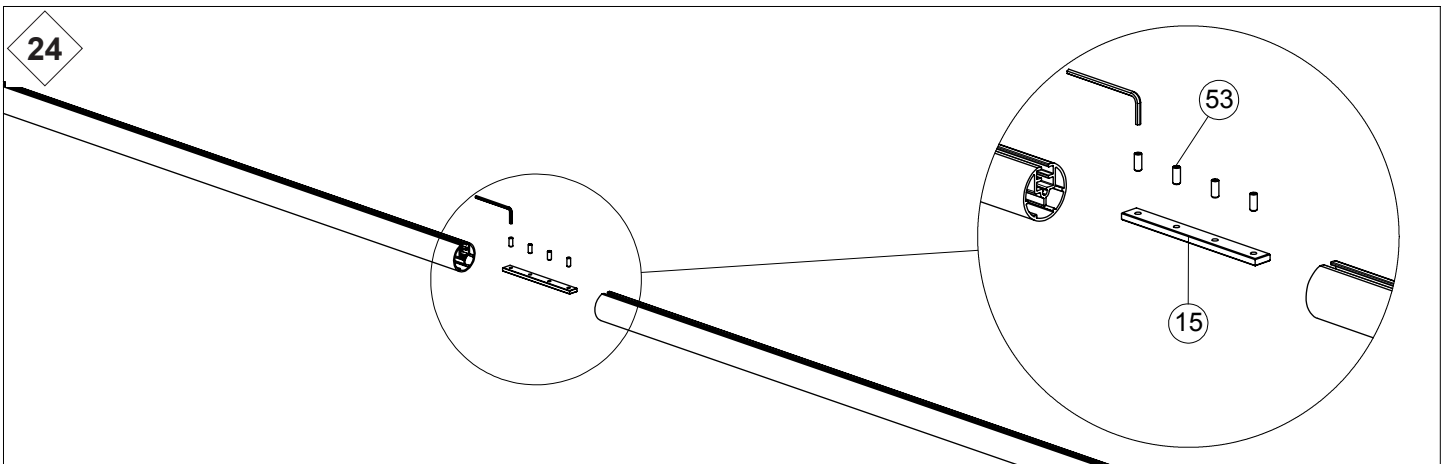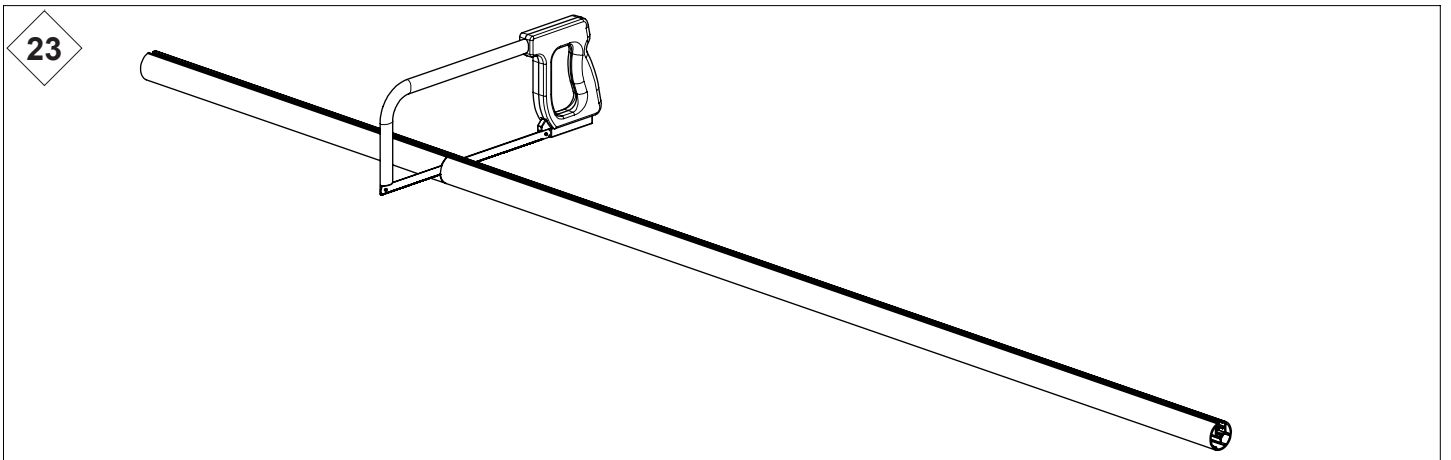
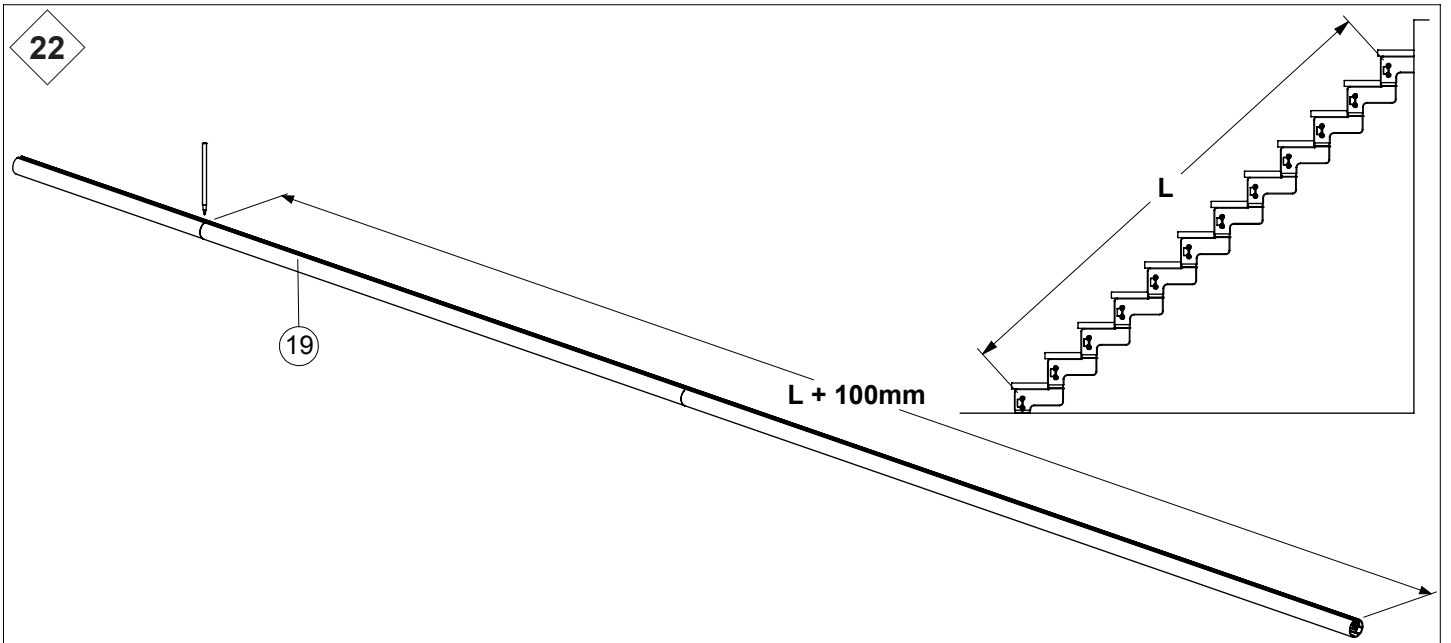


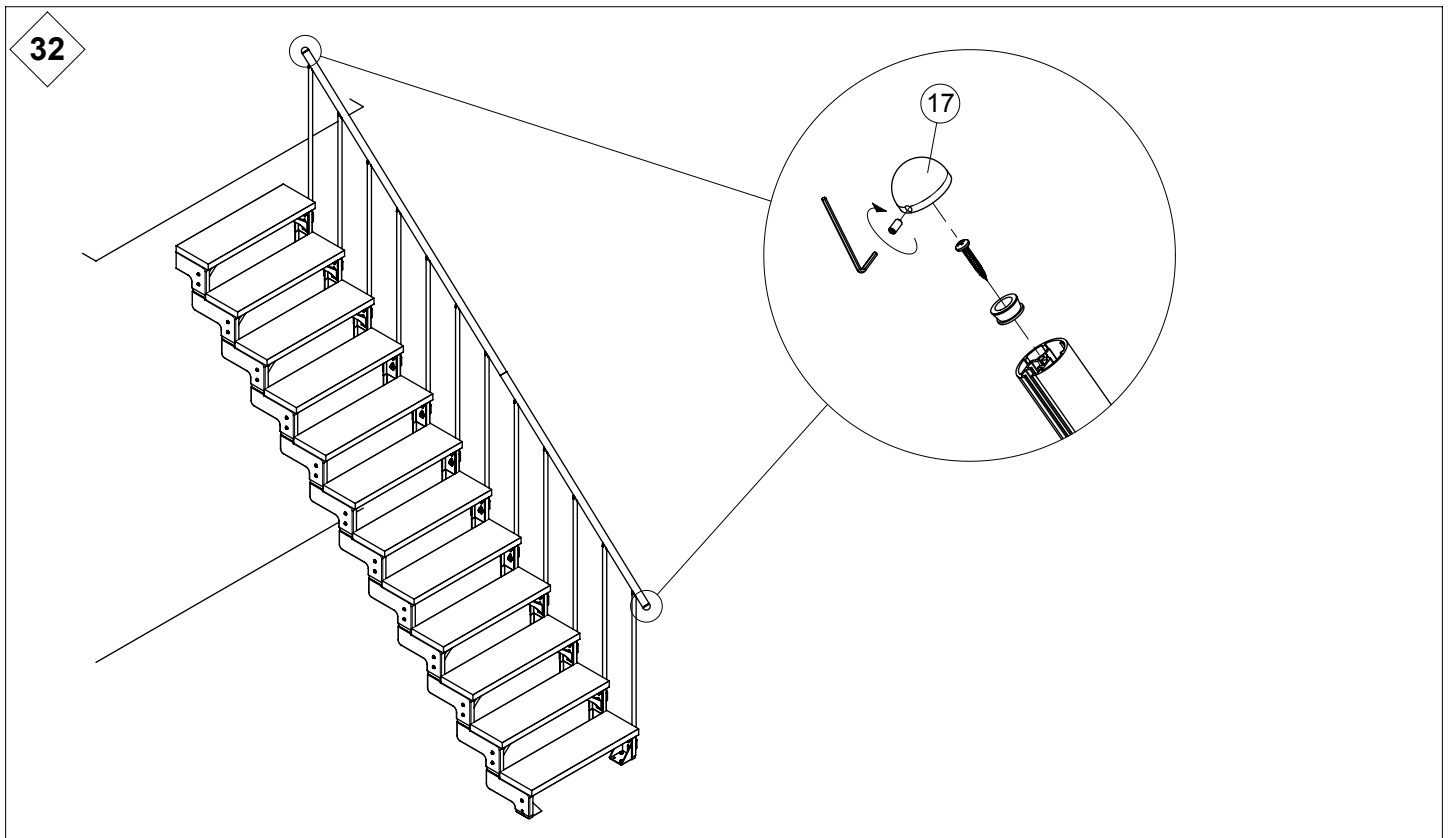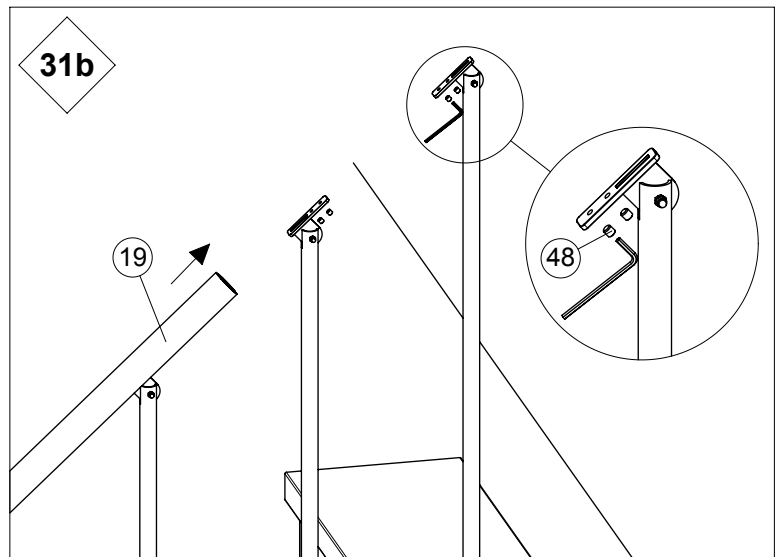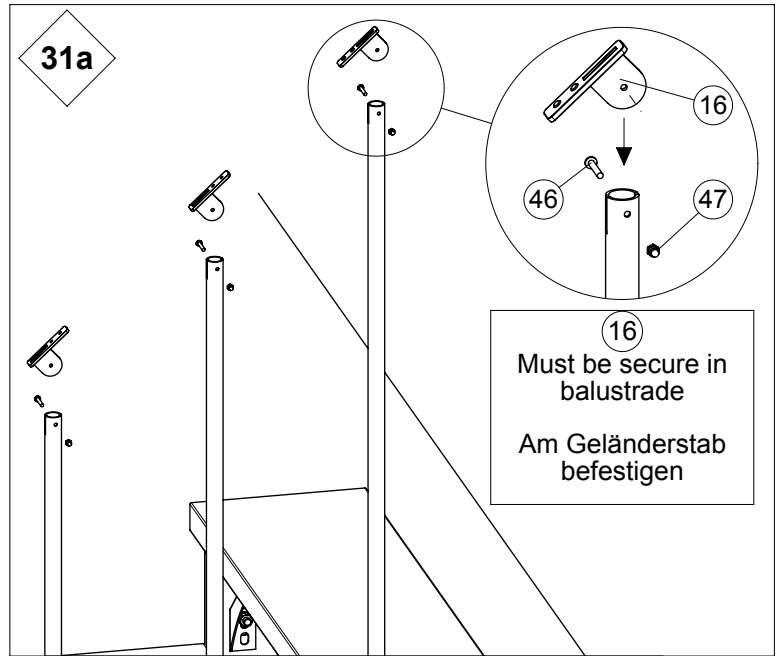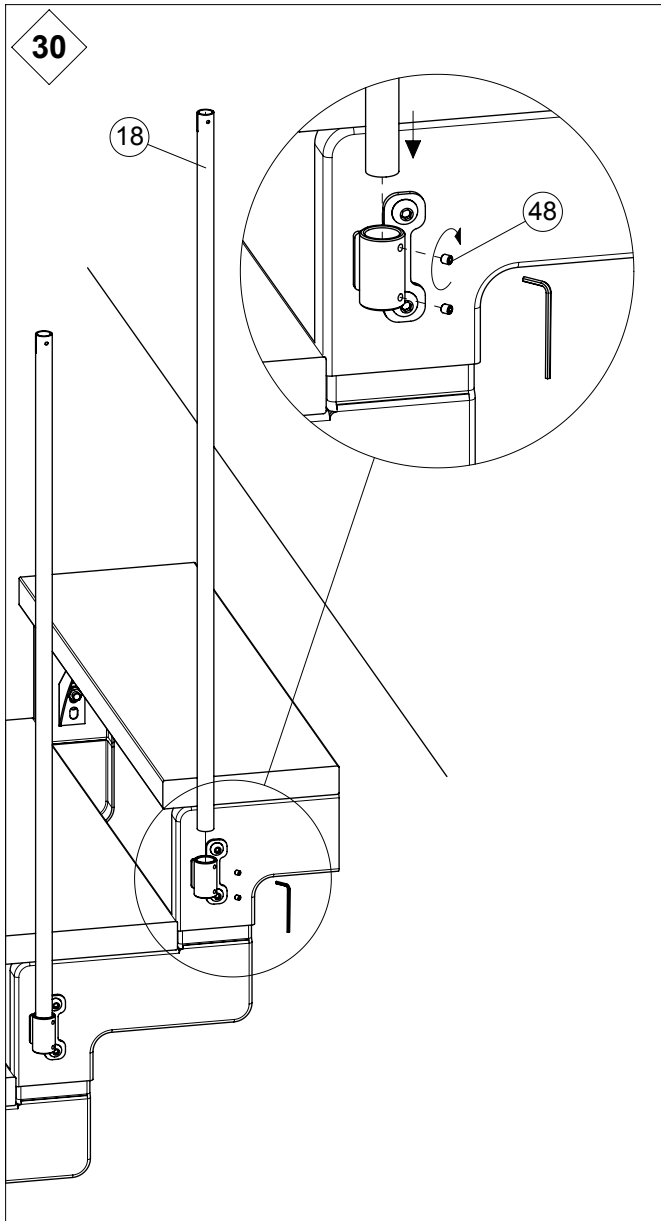

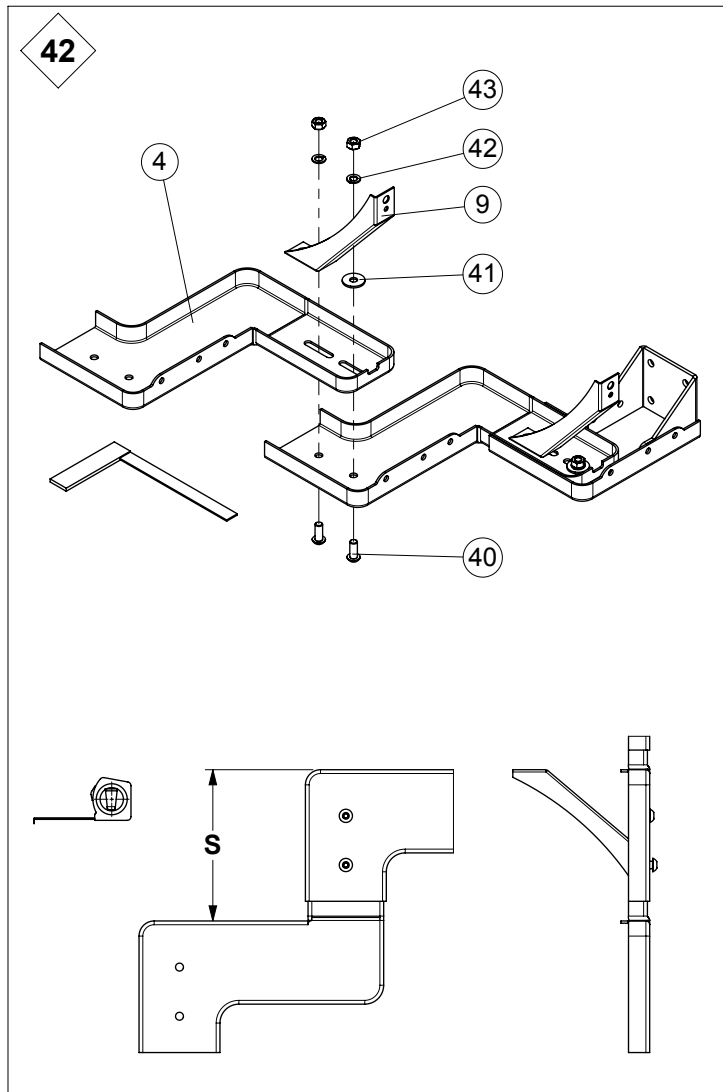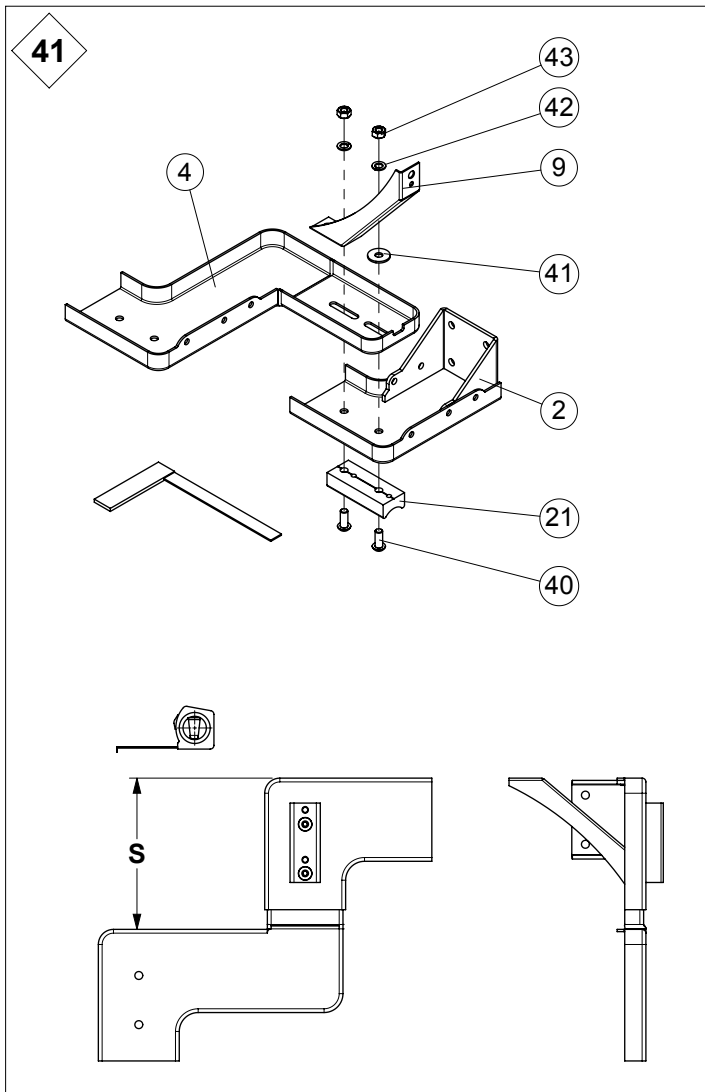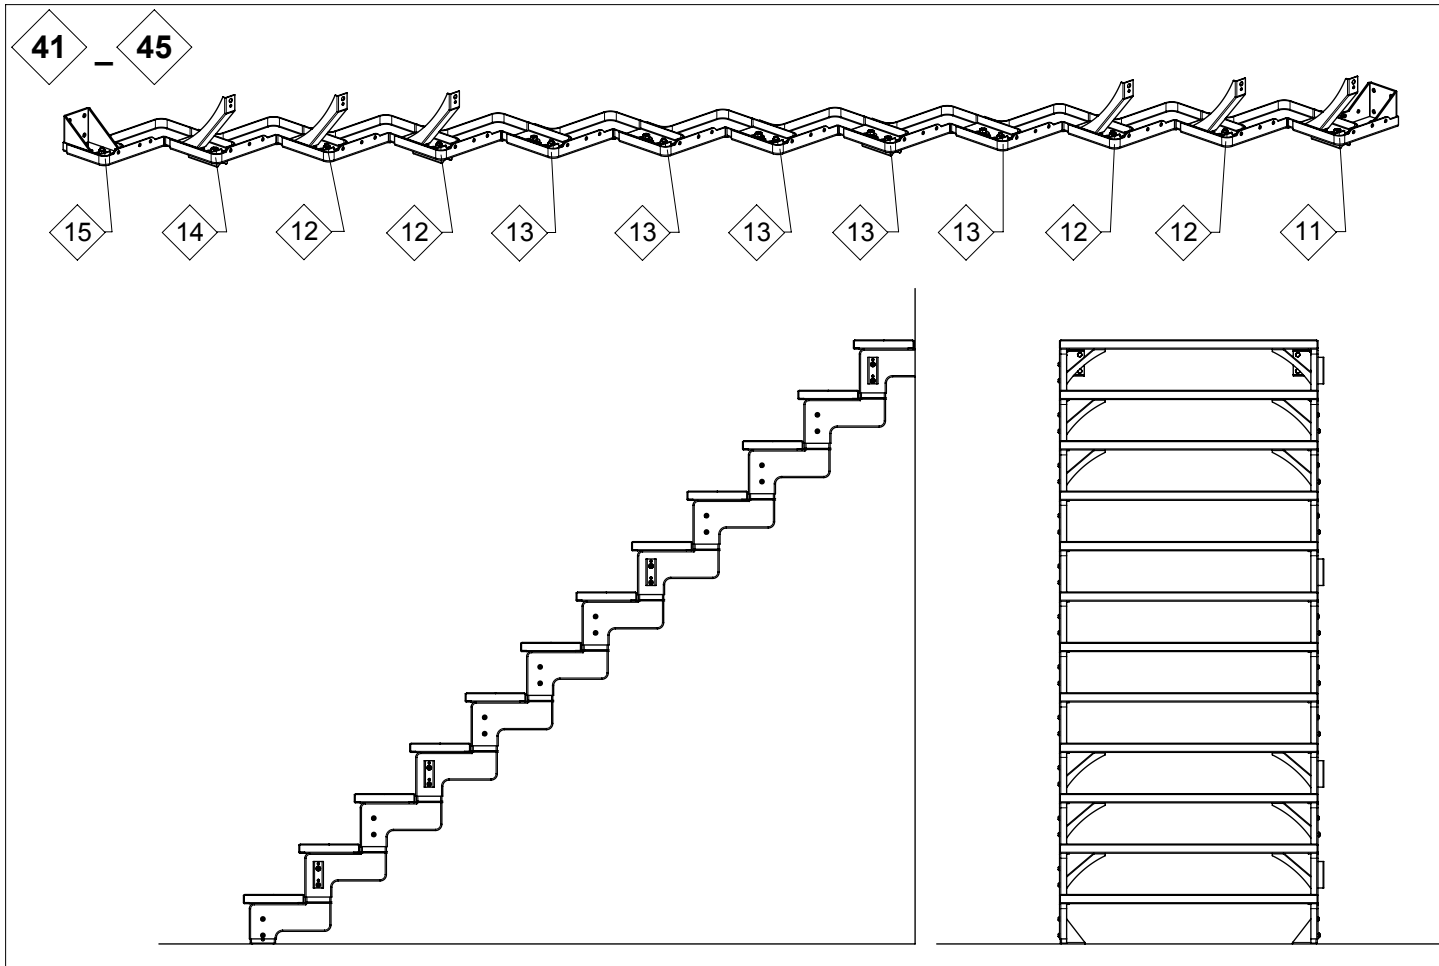




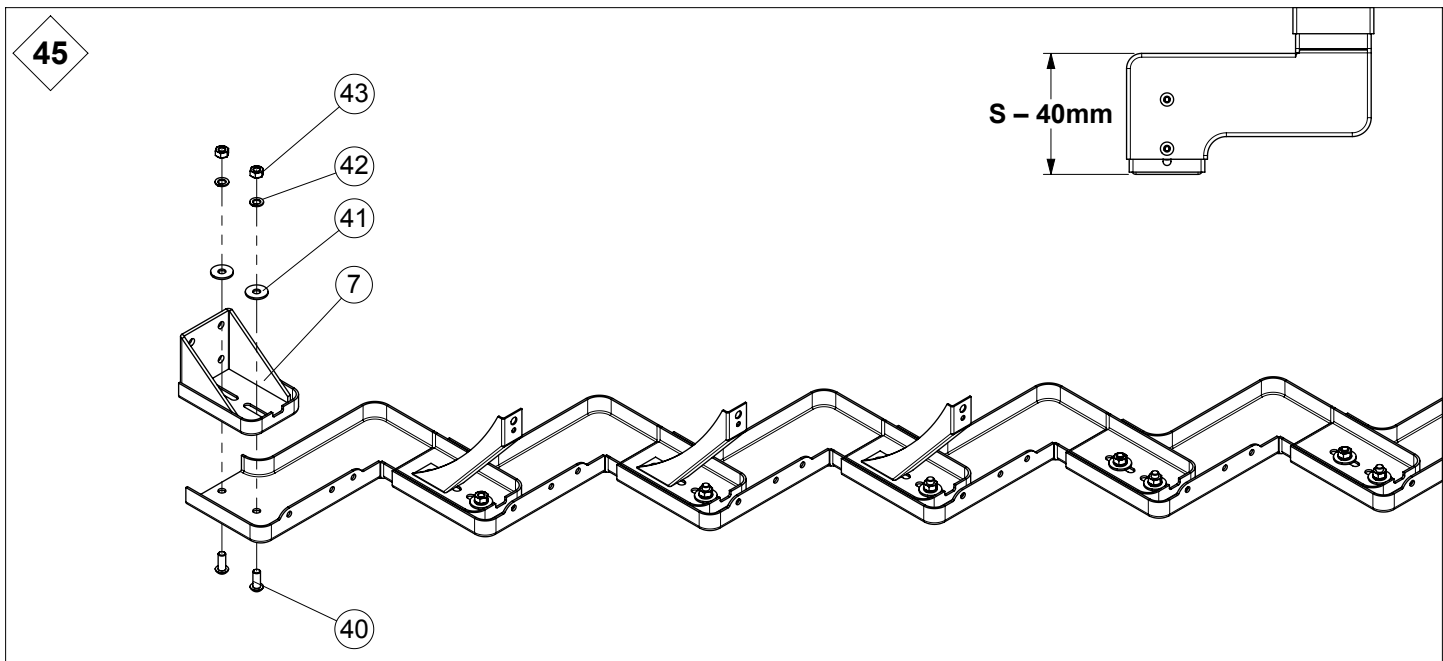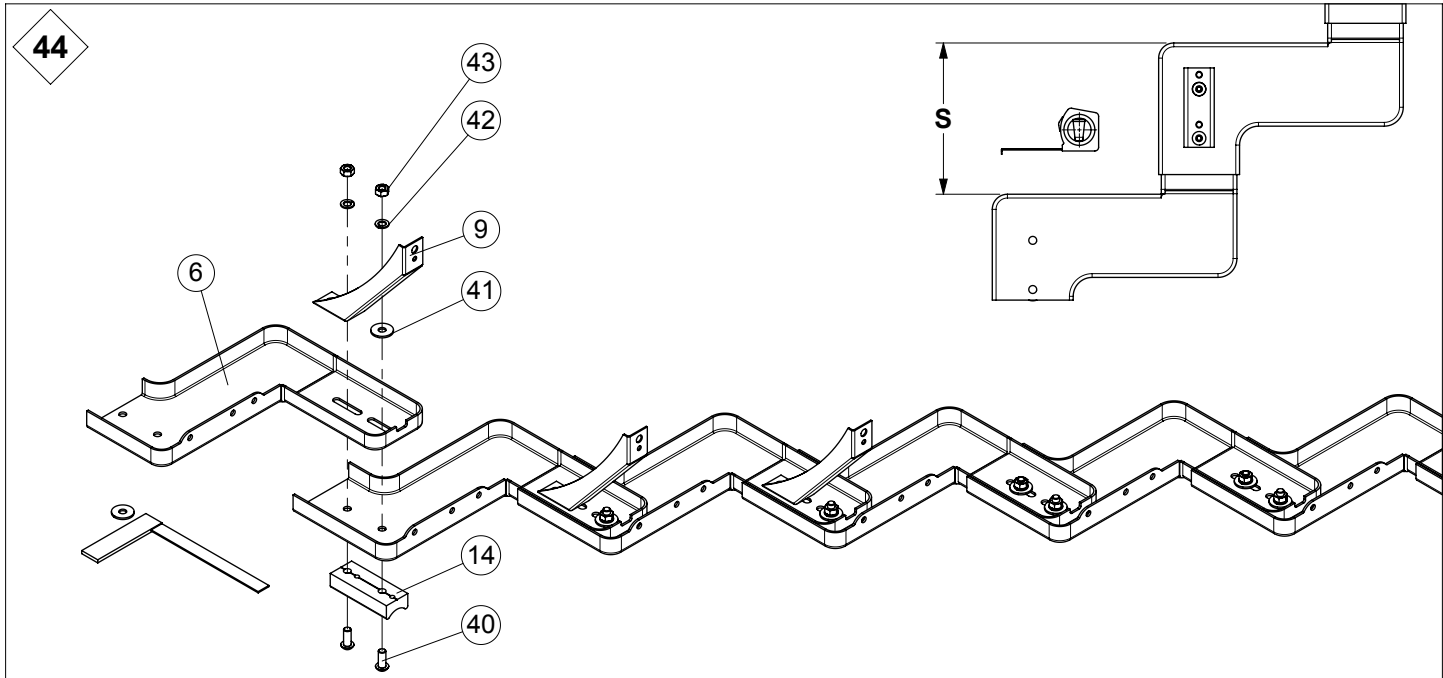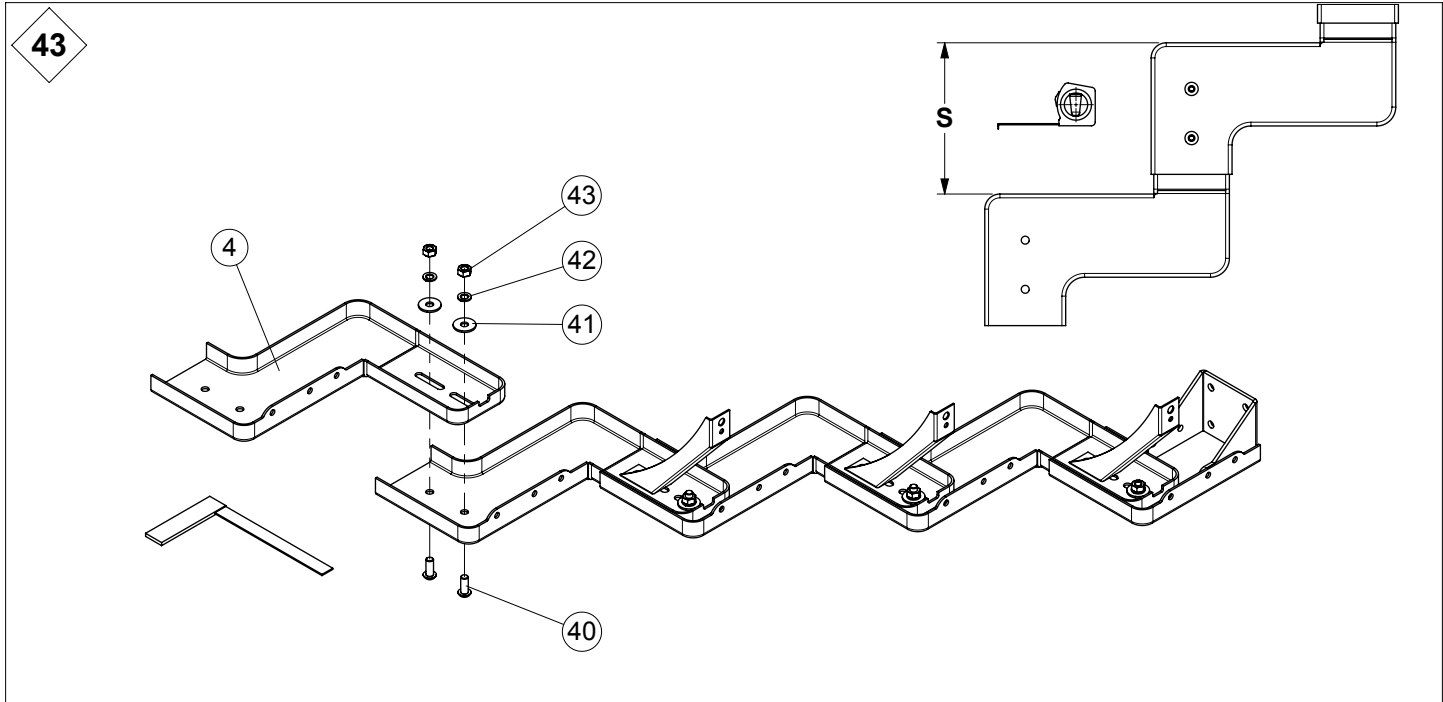


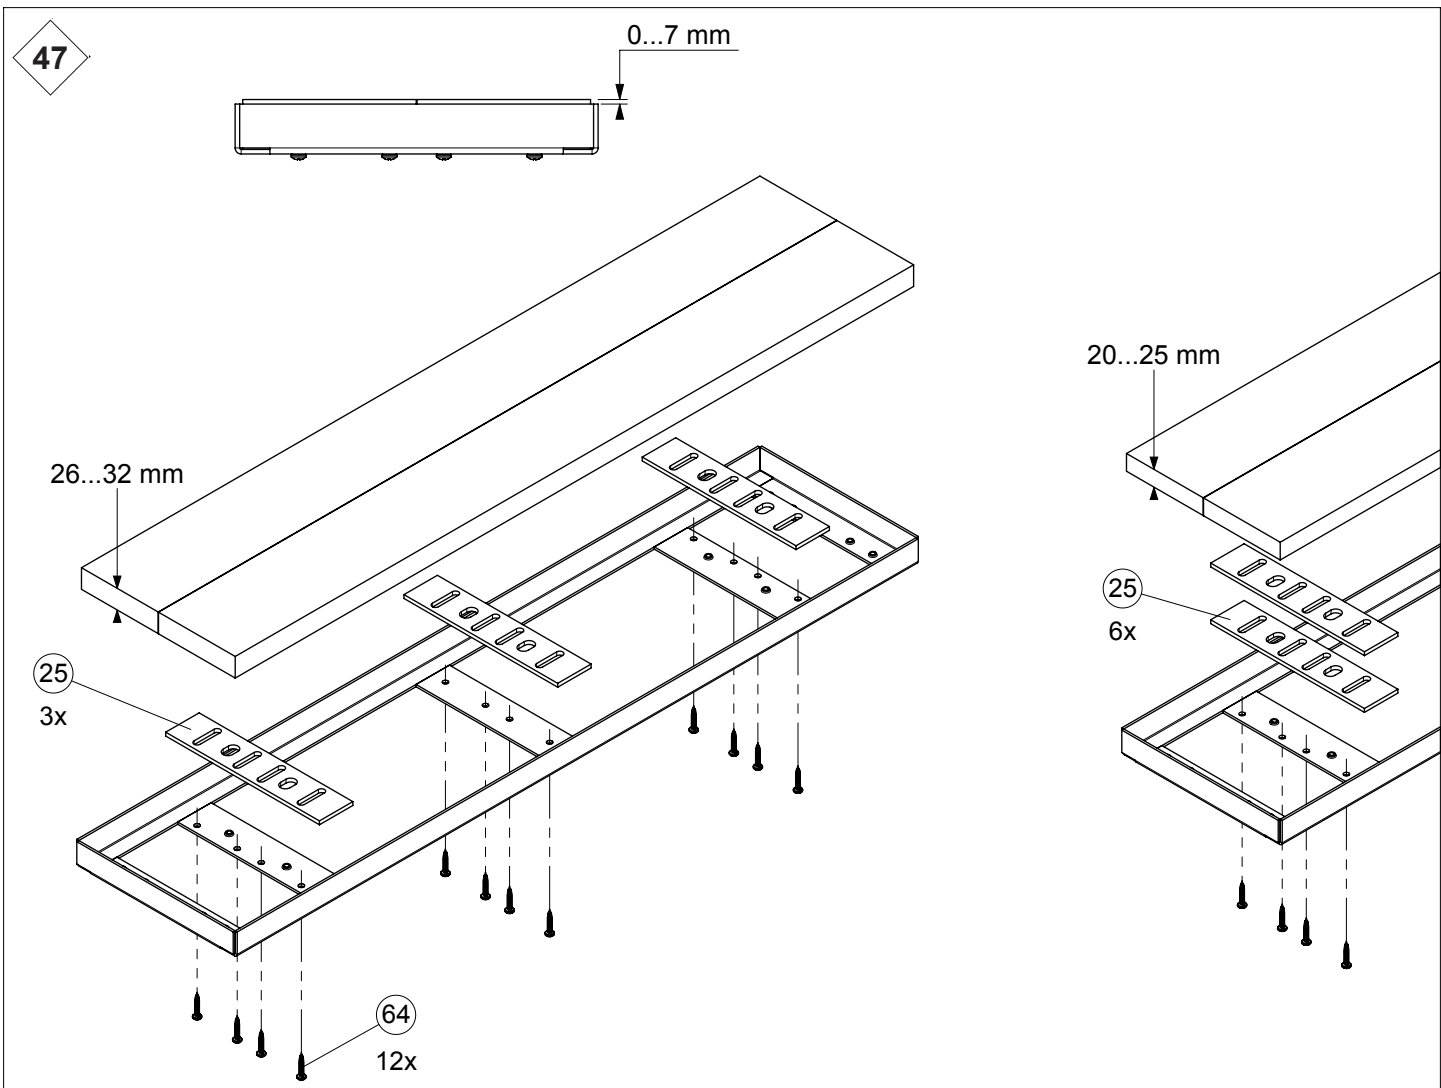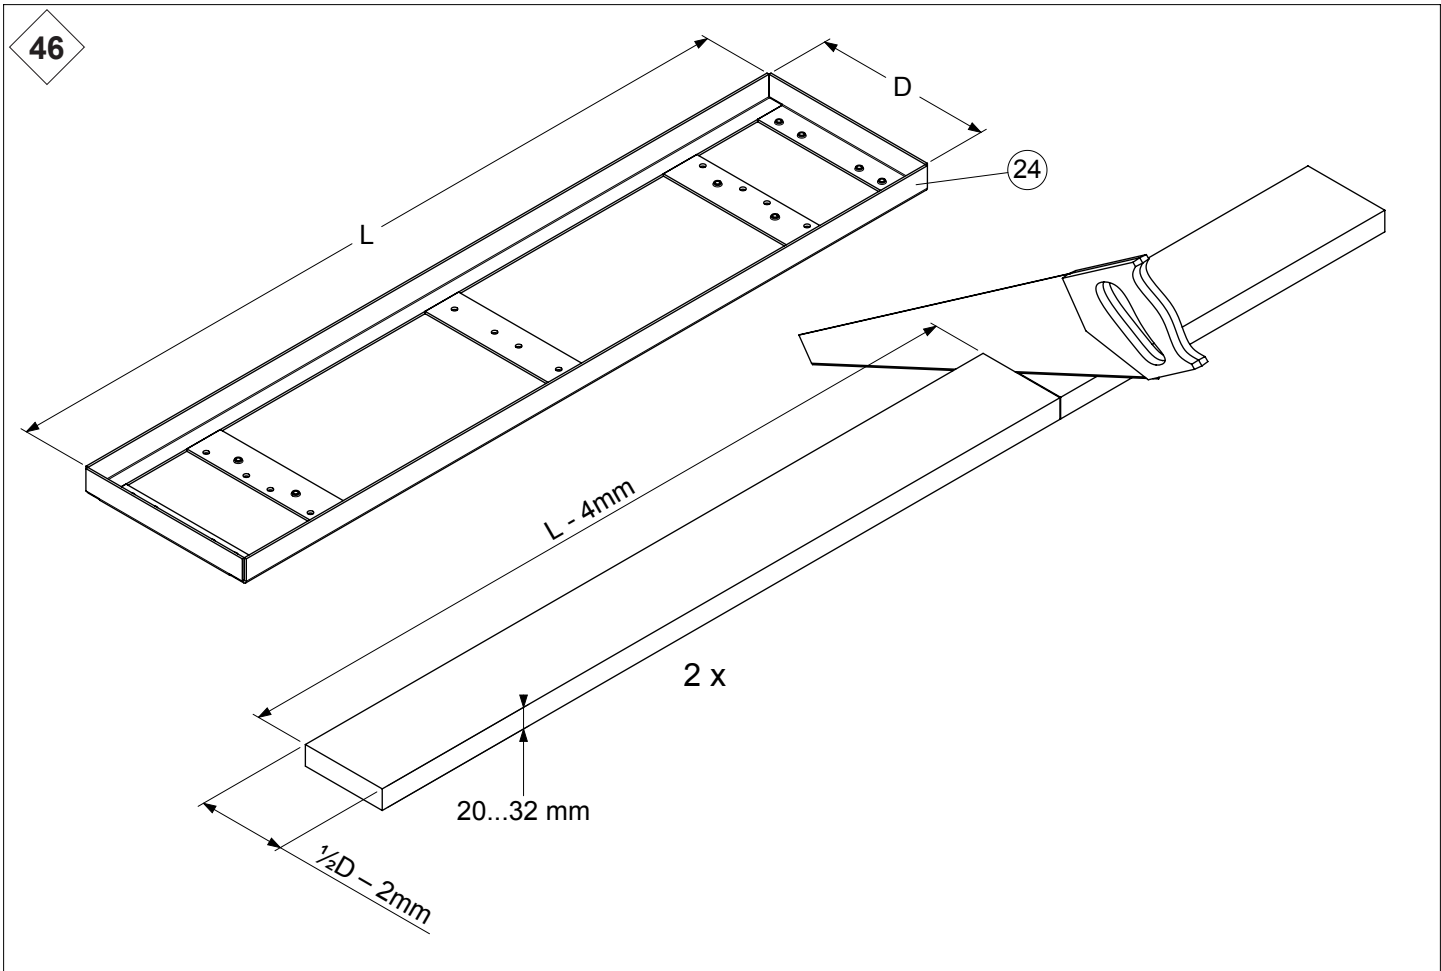


48

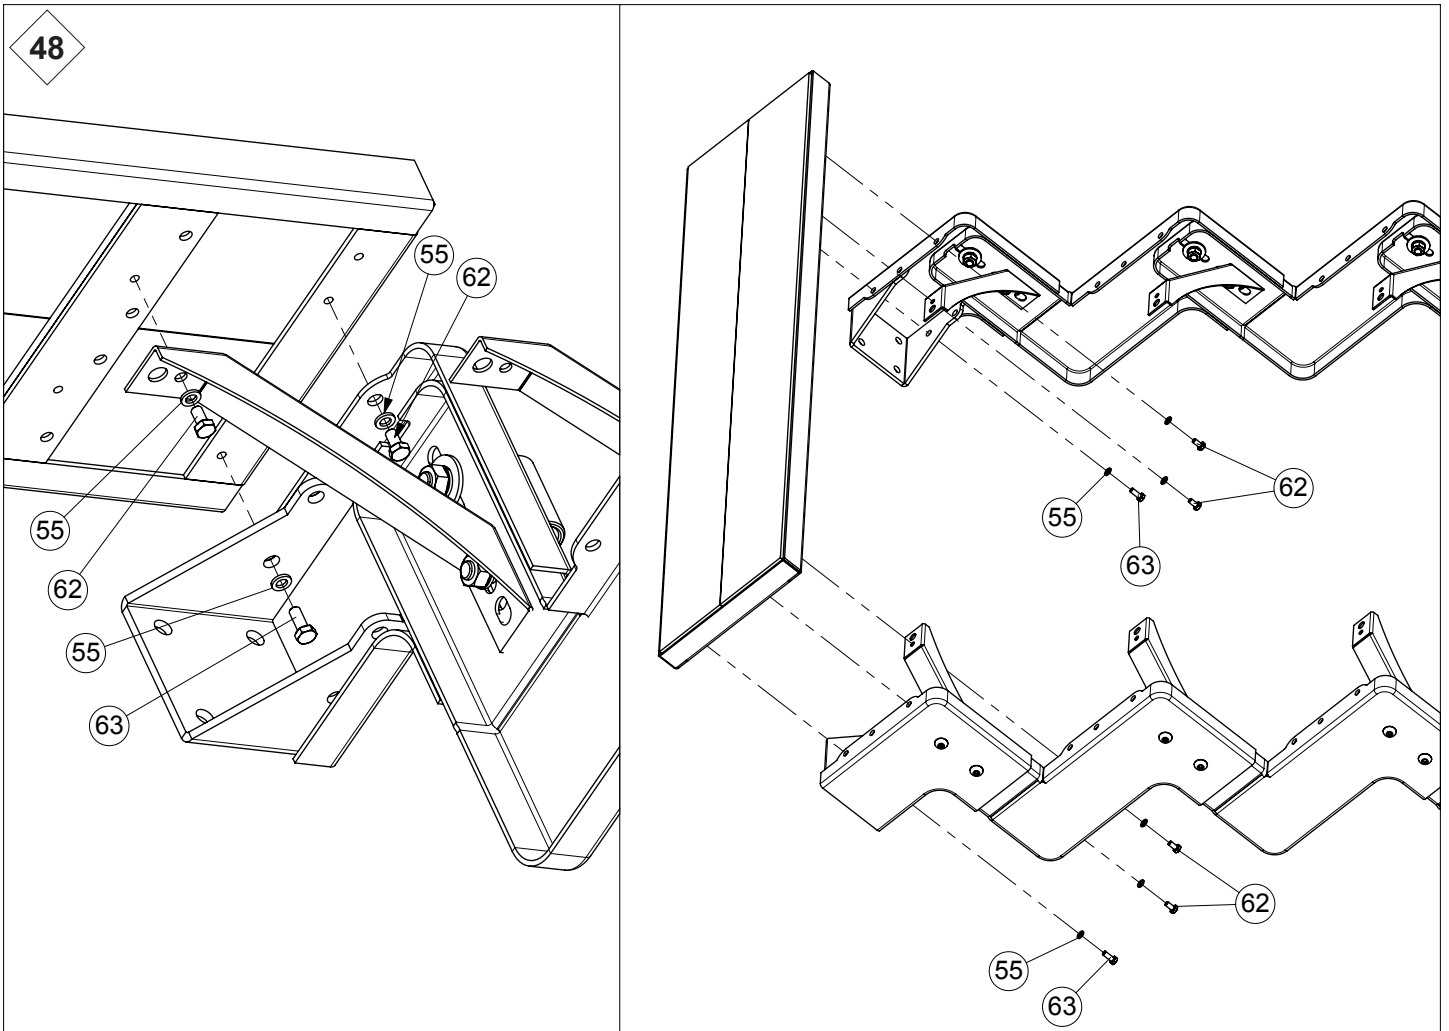

49

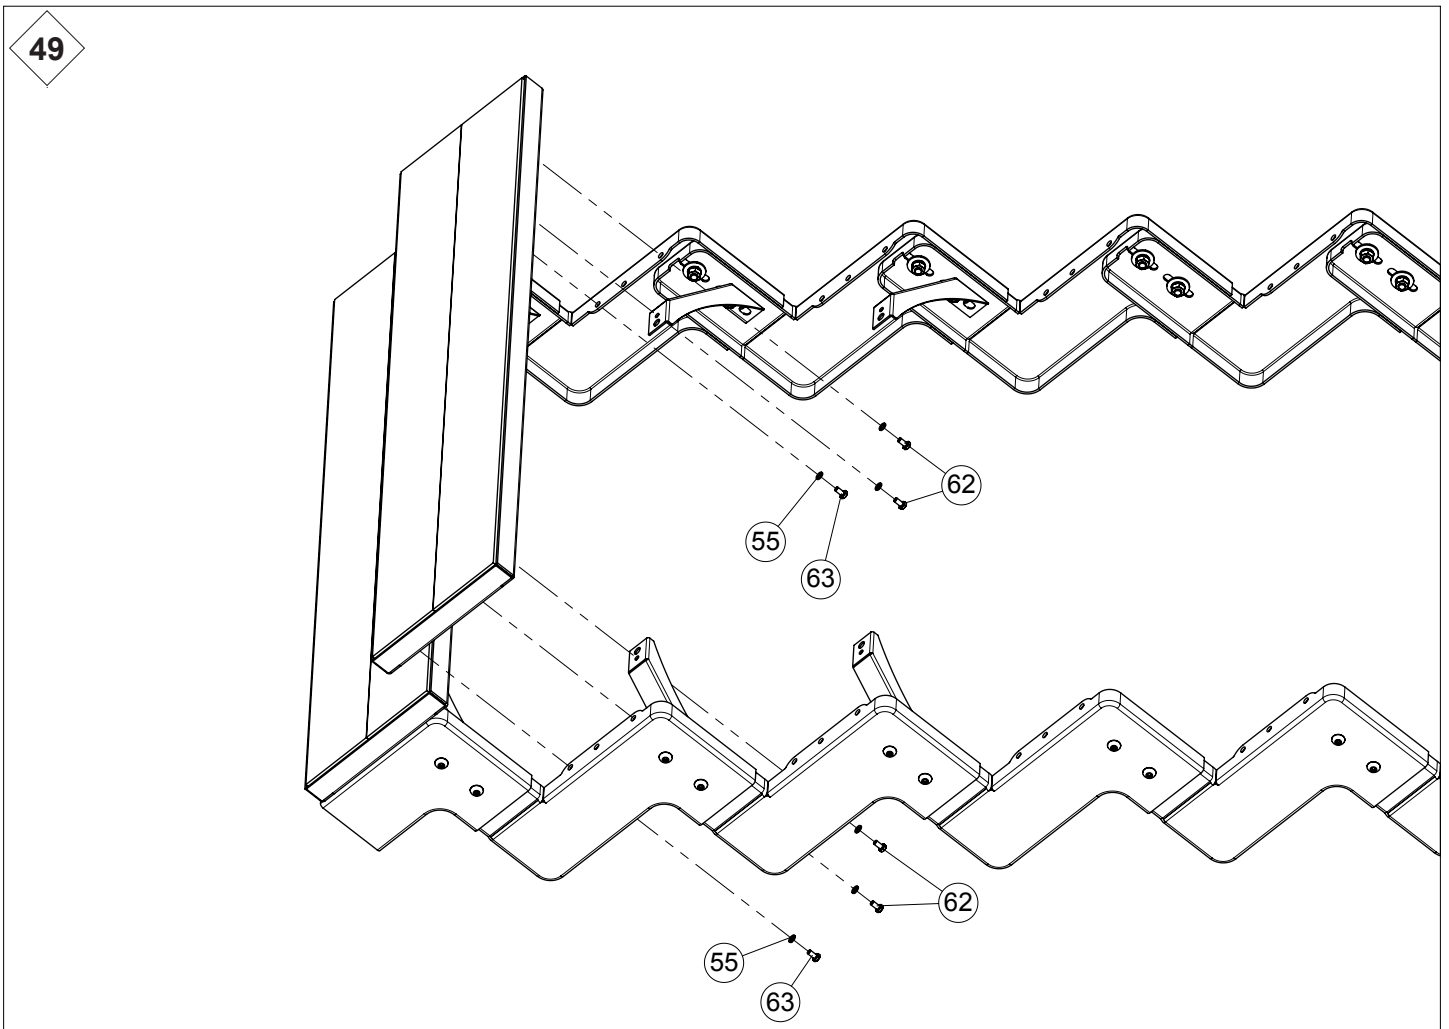

50

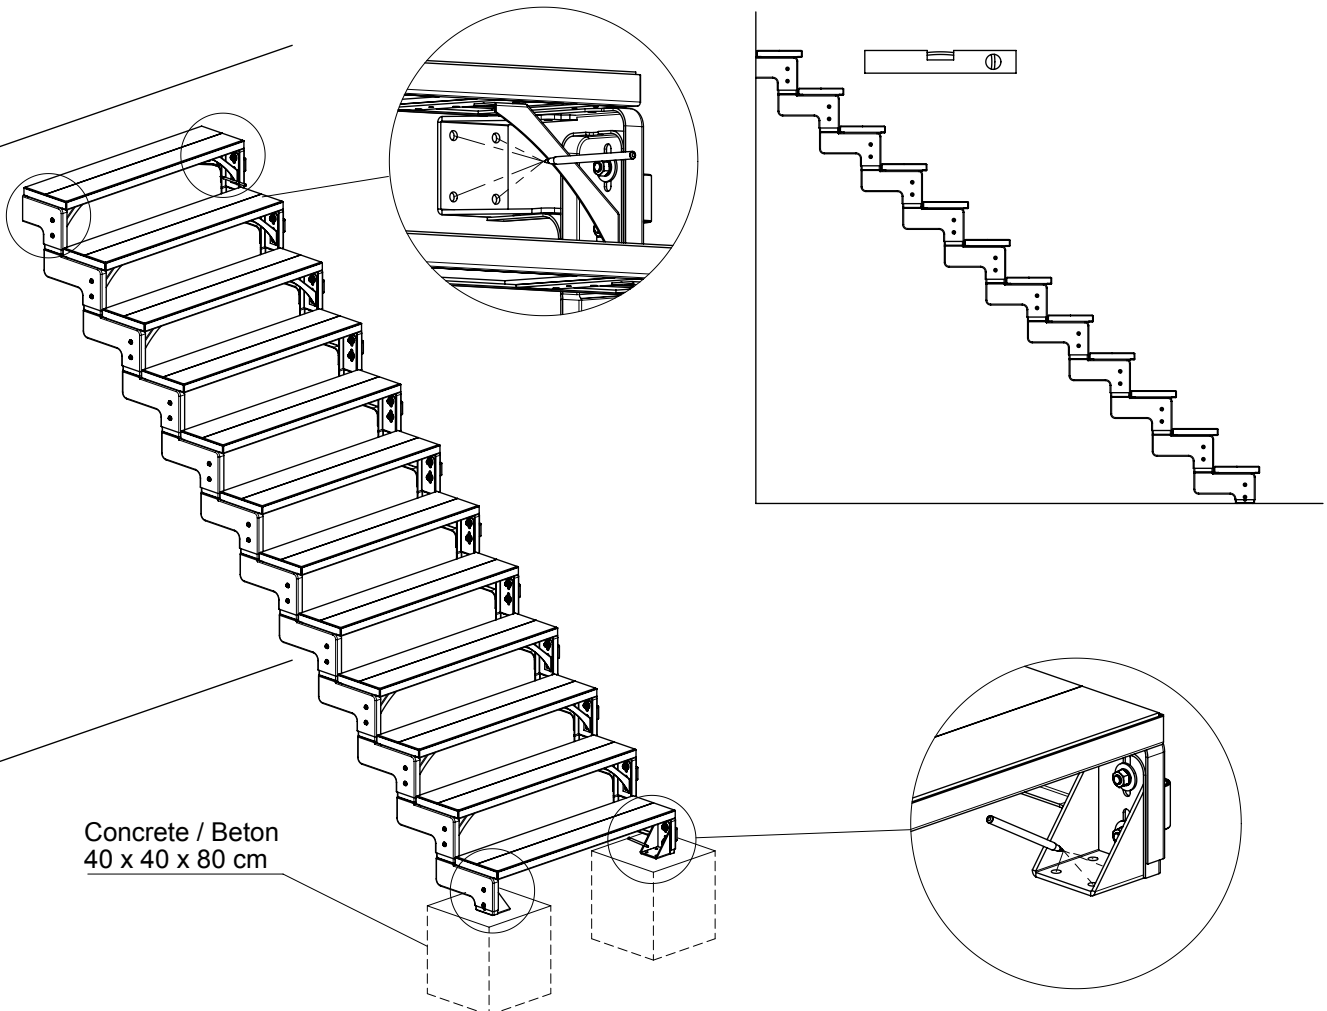

51

