



CONCRETE SCREW SANDWICH ELEMENT

Mounting

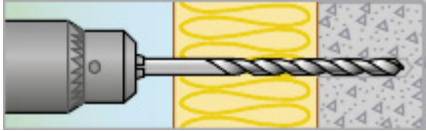

1. Drill a \varnothing 5mm hole through the insulation into the concrete wall. Drill depth min. 30mm in the concrete.

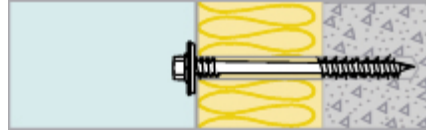

2. Drive the screw through the sheet metal and insulation into the concrete.