

KEY CEILING ANCHOR


Mounting



1. Drill an 8 mm hole. Depth minimum 30 mm.



2. Knock the key anchor into the hole.

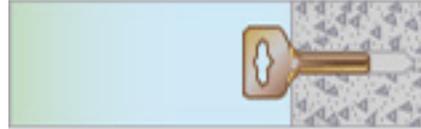

3. The installation is finished.